

- (H) HONDA -				
Accessory		Application	Publications No. All 30491	
INSTALLATION	CROSSBARS (EX) P/N 08L04-S9V-100A		2006 PILOT	Issue Date
INSTRUCTIONS				SEP 2005
PARTS LIST		INSTALLATION		
Front cross bar (long)		ins ski eq eq	stomer Information: The info tallation instruction is intended lled technicians who have the uipment, and training to correct uipment to your vehicle. These ould not be attempted by "do-it	d for use only by proper tools, ctly and safely add procedures
Rear cross bar (short)		NOTE:		
		Wipe the roof rails before installing the crossbars.		
		Be extremely careful not to damage the body paint.		
		1. Insert a small flat-tip screwdriver into the hole on the inside of the roof rail base and release the retaining tab, then remove the front cover.		
4 Holders			RETAINING TAB FRONT COVER	ROOF RAIL
4 Torx bolts		SMALL FLAT-TIP SCREWDRIVER		
4 Lock washers			ROOF RAIL BASE	\leq
4 Washers		2.	Remove the roof rail base from nuts and one bolt).	n the roof (two Torx
TOOLS REQUIRED Small flat-tip screwdriver T-30 Torx bit T-15 Torx bit			T-30 TORX NUT	

T-15 TORX BOLT

ROOF RAIL BASE (Remove.) 3. Insert the two holders in the groove of the roof rail.

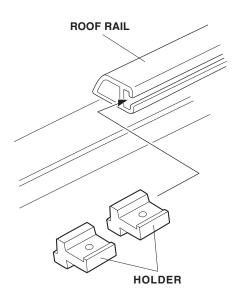

- 4. Repeat steps 1 through 3 on the other roof rail.
- 5. Slide each holder back, and align the hole in the holder with mark on the inside of the roof rail.

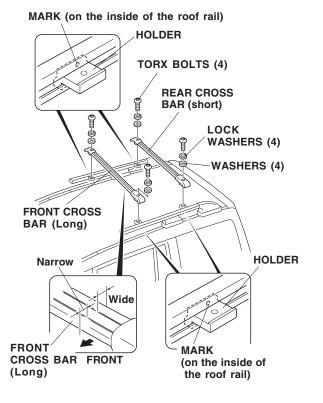

- Position the cross bars on the holders, and install the Torx bolts with lock washers and washers. Torque the bolts to 10 N·m (7 lb-ft).
- 7. Reinstall the roof rail bases and the front covers.

USE AND CARE

- Check the roof rack cross bar mounting bolts frequently, and retighten them if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 165 lbs (75 kg).

