

| F HONDA -   | Accessory                            | Application Publication  |                     |
|---|--------------------------------------|--|---------------------|
| INSTALLATION<br>INSTRUCTIONS  | CROSSBARS (EX)<br>P/N 08L04-S9V-100A | 2007 PILOT   | Date                |
| PARTS LIST  |                                      | INSTALLATION   |                     |
| Front cross bar (long)  |                                      | <b>Customer Information:</b> The information in the installation instruction is intended for use only skilled technicians who have the proper tools equipment, and training to correctly and safel equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers." | y by<br>,<br>ly add |
|   | 1                                    | NOTE:  |                     |
| Rear cross bar (short)  | •                                    | • Wipe the roof rails before installing the crossbars.   |                     |
| ()  |                                      | Be extremely careful not to damage the body paint.   |                     |
|   | 1                                    | <ol> <li>Insert a small flat-tip screwdriver into the h<br/>the inside of the roof rail base and release<br/>retaining tab, then remove the front cover.</li> </ol>  | the                 |
| 4 Holders   |                                      | RETAINING TAB<br>FRONT<br>COVER  |                     |
| 4 Torx bolts  |                                      | SMALL FLAT-TI<br>SCREWDRIVER   |                     |
| 4 Lock washers  |                                      | ROOF RAIL<br>BASE  |                     |
| 4 Washers   |                                      | <ol> <li>Remove the roof rail base from the roof (tw<br/>nuts and one bolt).</li> </ol>  | vo Torx             |
| <b>TOOLS REQUIRED</b><br>Small flat-tip screwdriver<br>T-30 Torx bit<br>T-15 Torx bit |                                      | T-30 TORX NUT  |                     |

T-15 TORX BOLT

ROOF RAIL BASE (Remove.) 3. Insert the two holders in the groove of the roof rail.

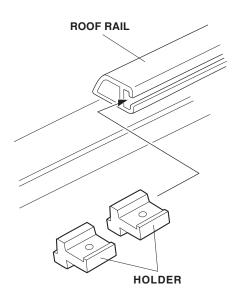

- 4. Repeat steps 1 through 3 on the other roof rail.
- 5. Slide each holder back, and align the hole in the holder with mark on the inside of the roof rail.

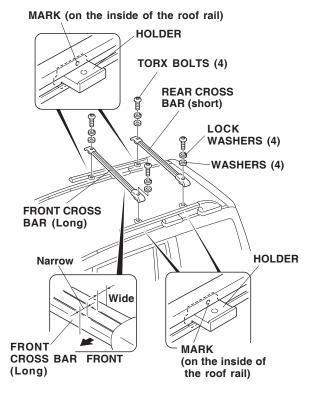

- Position the cross bars on the holders, and install the Torx bolts with lock washers and washers. Torque the bolts to 10 N⋅m (7 lb-ft).
- 7. Reinstall the roof rail bases and the front covers.

## **USE AND CARE**

- Check the roof rack cross bar mounting bolts frequently, and retighten them if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 165 lbs (75 kg).

