



INSTALLATION INSTRUCTIONS

Accessory
**ILLUMINATED
DOOR SILL TRIM**


Application
**2012 ACCORD
4-DOOR**

Publications No.
All 46600
Issue Date
AUG 2011


PARTS LIST

Illuminated Door Sill Trim Attachment Kit 08E12-TA0-100A


Harness

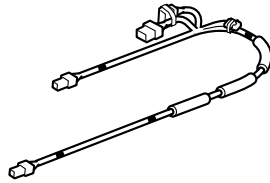


2 Front step trim

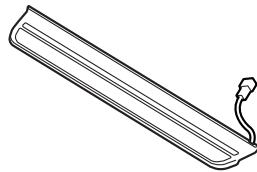


2 Rear step trim




15 Wire ties

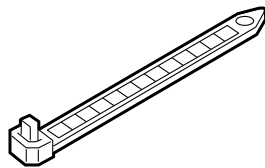

Wire tie with clip A

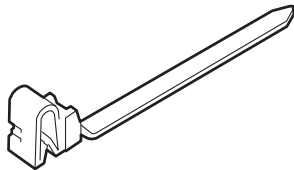


Wire tie with clip B

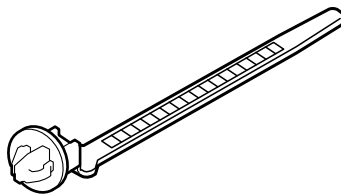


Harness tape



Fuse label

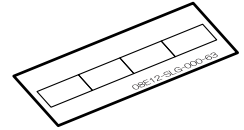


2 Alcohol swabs

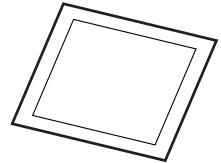


Illuminated Door Sill Trim Attachment Kit 08E12-TA0-100B


Harness

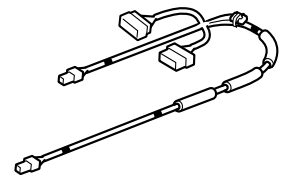


2 Front step trim

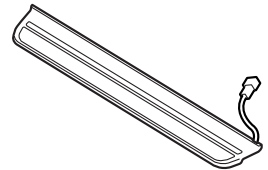


2 Rear step trim




15 Wire ties

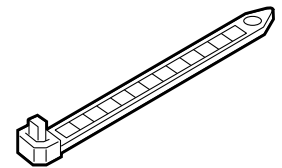

Wire tie with clip A

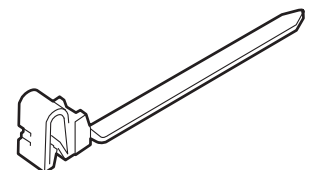


Wire tie with clip B

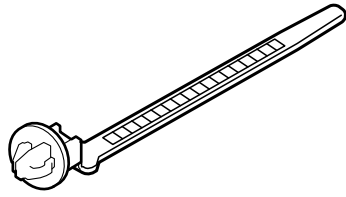


Harness tape



Fuse label

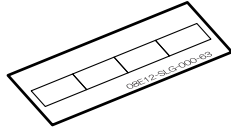


2 Alcohol swabs

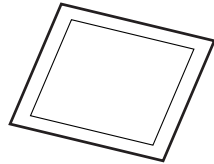

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Steel wire
Scissors
Diagonal cutters
Ratchet
8 mm and 10 mm Socket
10 mm Open end wrench
Trim Tool Set (T/N SOJATP2014)
Utility knife
Ruler
Tape
Isopropyl alcohol
Shop towel
Needle nose pliers
Felt-tip pen

Illustration of the Illuminated Door Sill Trim Installed on the Vehicle

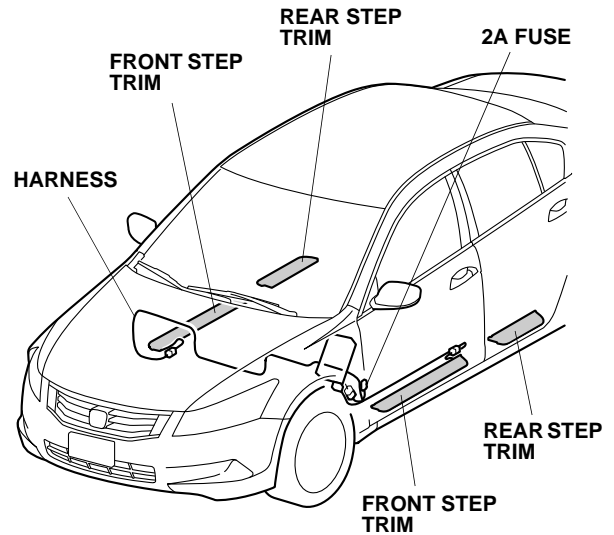


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Make sure you have the anti-theft codes for the audio and navigation system (if equipped).
2. Disconnect the negative cable from the battery.


3. **V6 model only:** Remove the passenger's dashboard under cover (three clips and two pins).

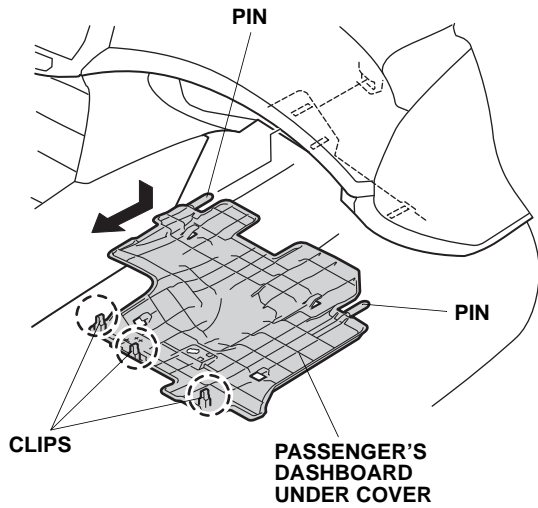


4. Release the glove box (damper rod and two stops).

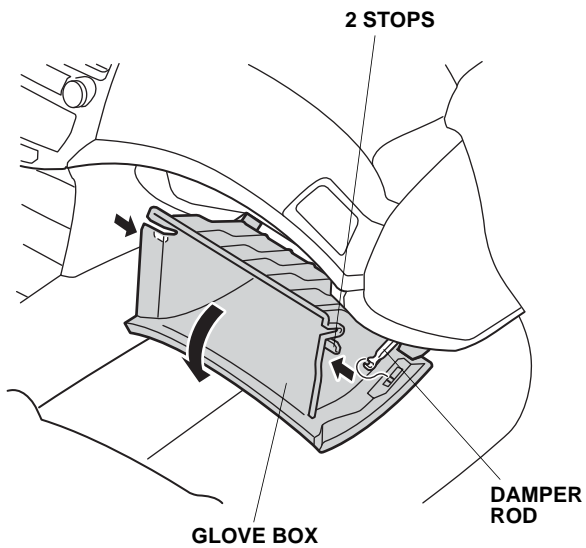


5. Remove the glove box (two screws).

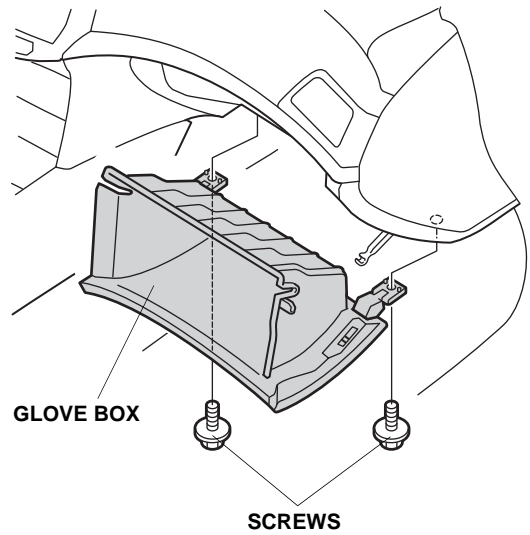


6. Remove the right front door sill trim (four clips).

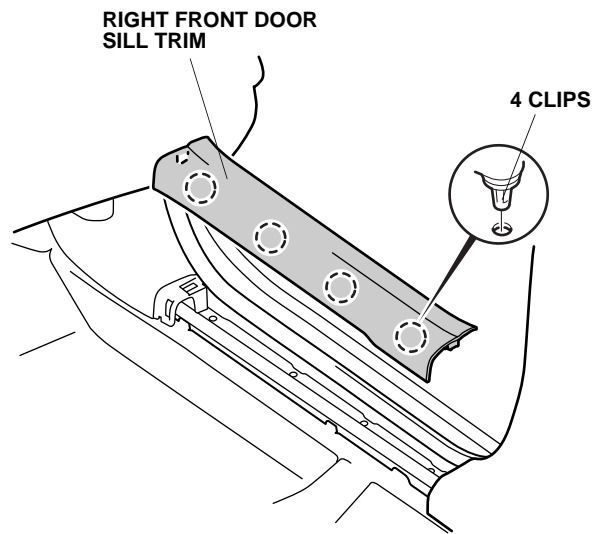


7. Pull away the door opening seal, and remove the right kick panel (two clips).

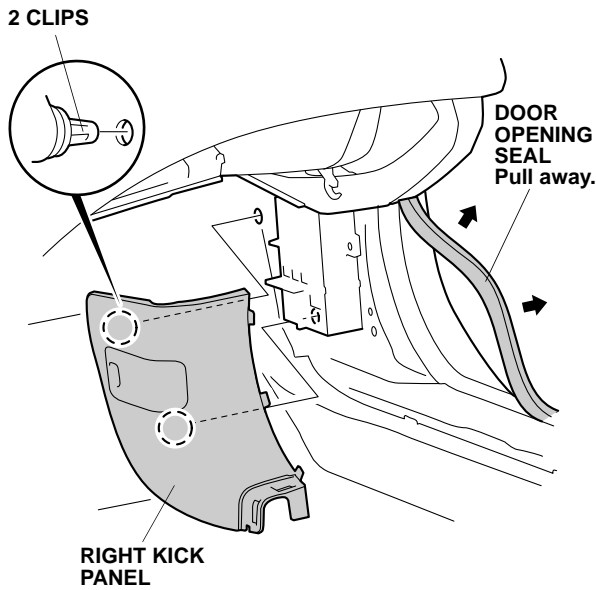


8. Release the center console, and remove the right center lower cover (one clip, two hooks, and one clip).

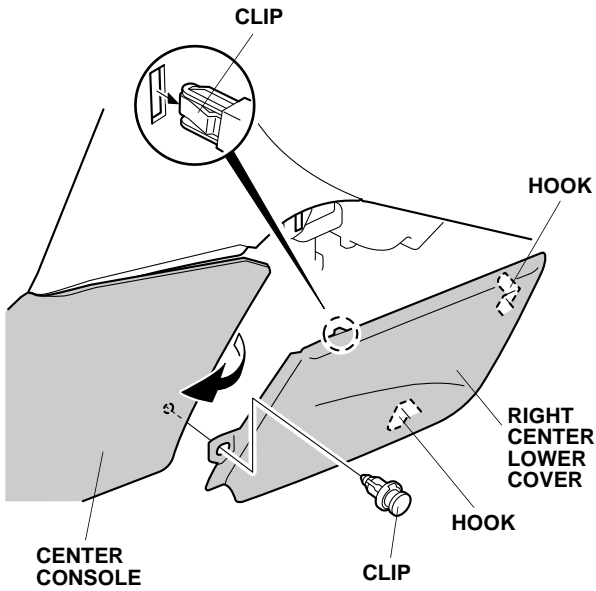

9. Remove the driver's dashboard lower cover (eight clips, two hooks, and unplug the vehicle connector).

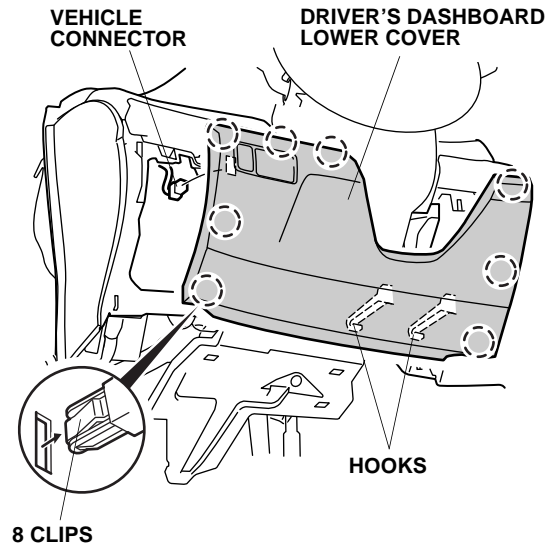


10. **V6 model only:** Remove the driver's dashboard under cover (three clips and one pin).

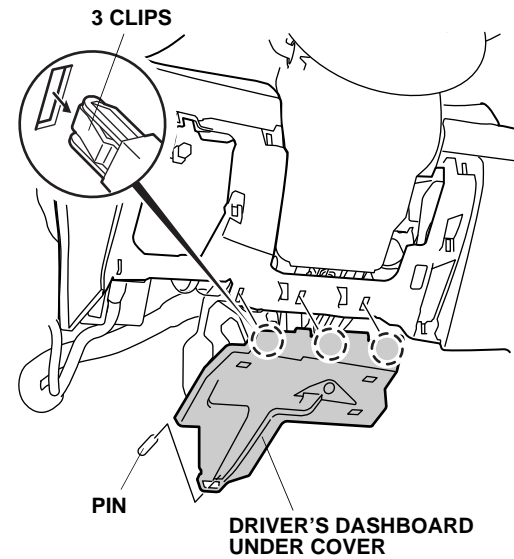


If the vehicle is equipped with HFT, continue to step 11. If not, go to step 14.


11. Pull away the door opening seal by the dashboard left side cover.

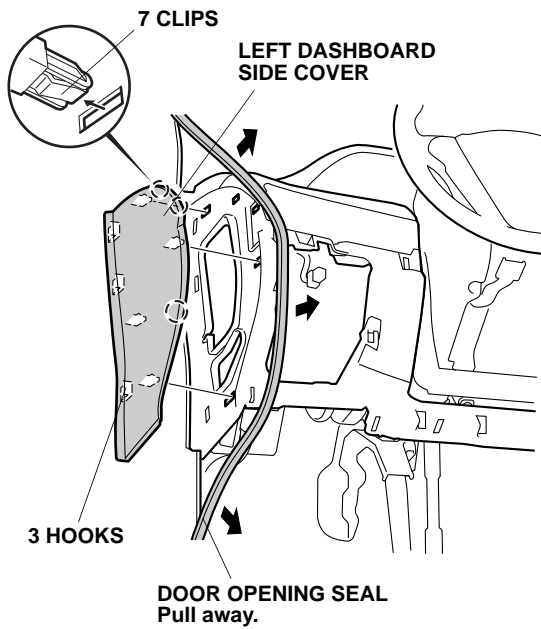


12. Remove the dashboard left side cover (seven clips and three hooks).
13. Remove the HFT control unit (two bolts and unplug the vehicle connector).

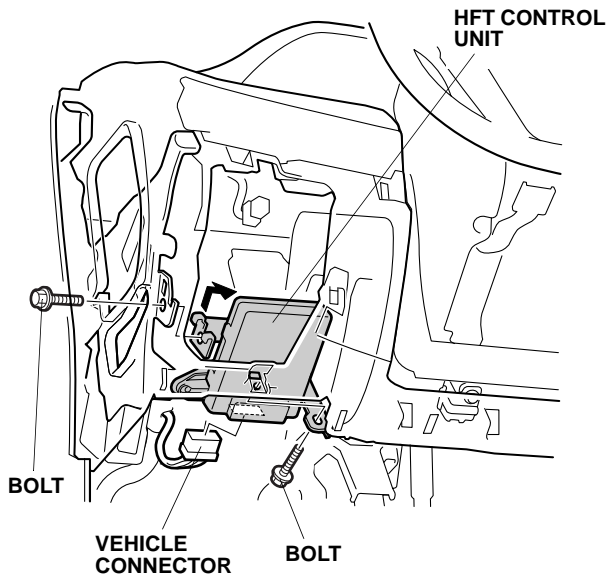


14. Make sure the trunk lid/fuel fill door opener is unlocked. Remove the cover from the trunk lid/fuel fill door opener (six retaining tabs), and remove one self-tapping screw.

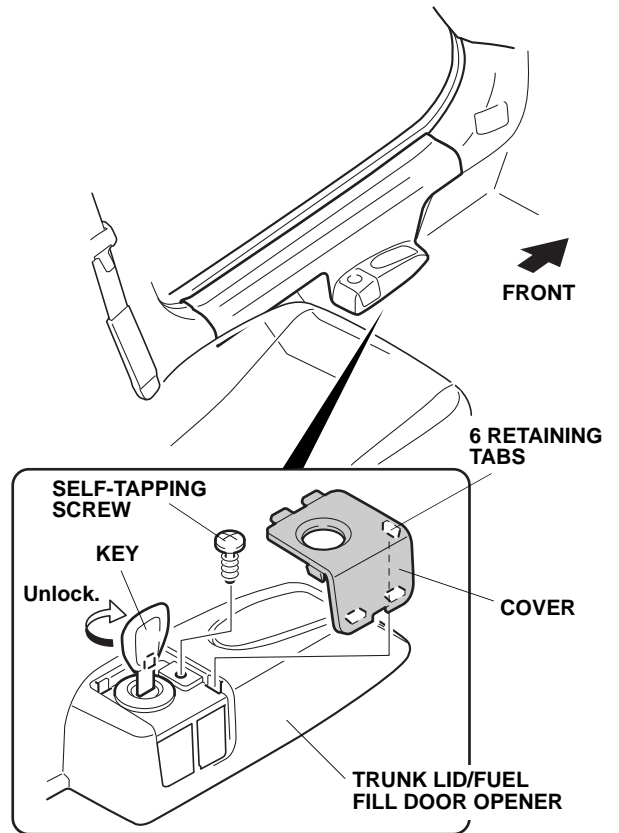


15. Lift the front to remove the left front door sill trim (four clips and one retaining tab).

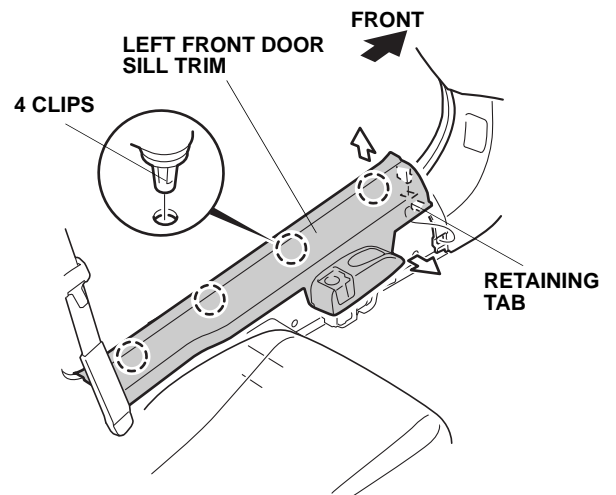


16. Pull away the door opening seal, and remove the left kick panel (two clips).

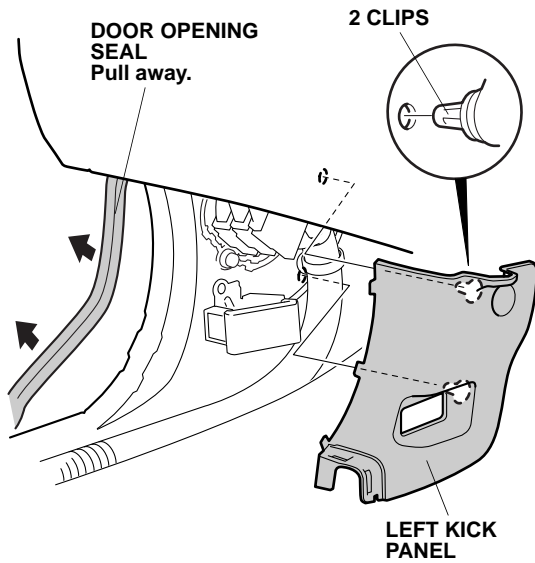

17. Release the center console, and remove the left center lower cover (one clip, two hooks, and one clip).

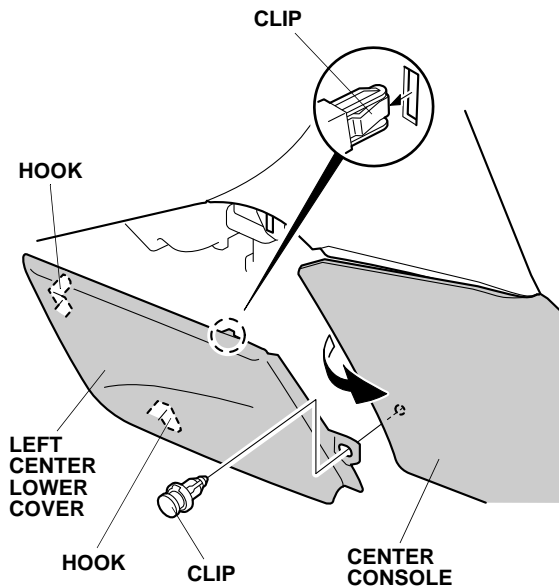


18. Using isopropyl alcohol on a shop towel, clean the area where the fuse seal will attach. Attach the fuse seal (STEP ILLUMI 2A) to the harness fuse case.

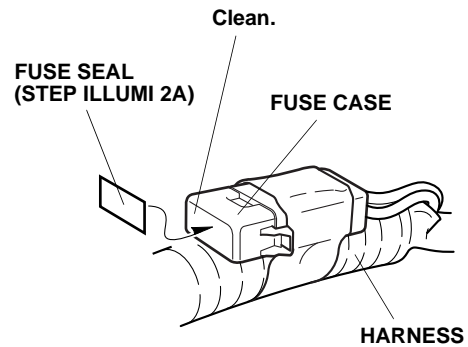

If you are installing a kit with a P/N ending in "A," continue to step 19.


If you are installing a kit with a P/N ending in "B," go to step 22.

19. Unplug the vehicle 4-pin connector from the fuse box.

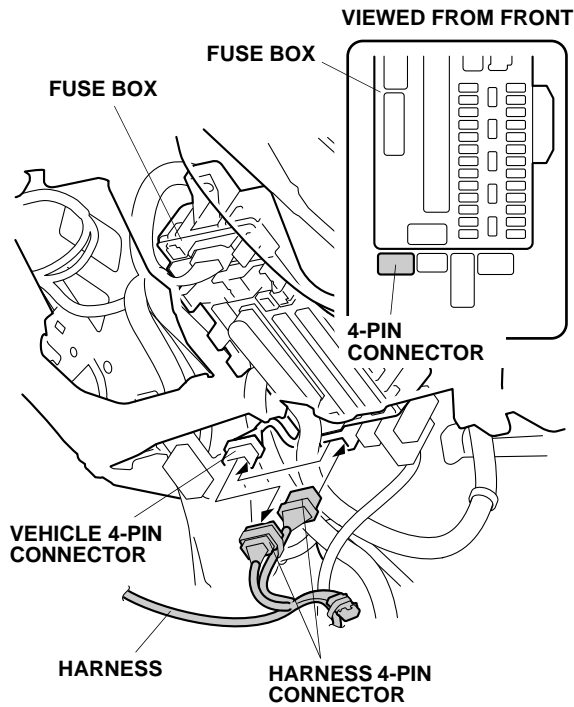


20. Plug the harness 4-pin connector to the fuse box 4-pin connector.
21. Plug the vehicle 4-pin connector to the harness 4-pin connector. Go to step 26.

22. Unplug the vehicle 20-pin connector from the fuse box.

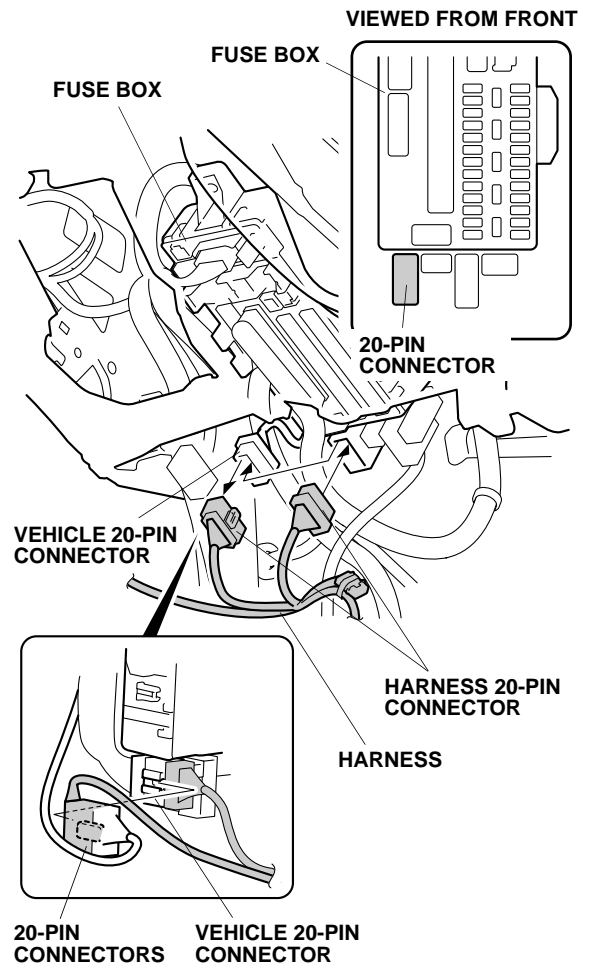


23. Plug the harness 20-pin connector to the fuse box 20-pin connector.
24. Plug the vehicle 20-pin connector to the harness 20-pin connector.
25. Clip the 20-pin connectors to the vehicle 20-pin connector.

26. Route the harness along the vehicle harness. Secure it to the vehicle harness with three wire ties.

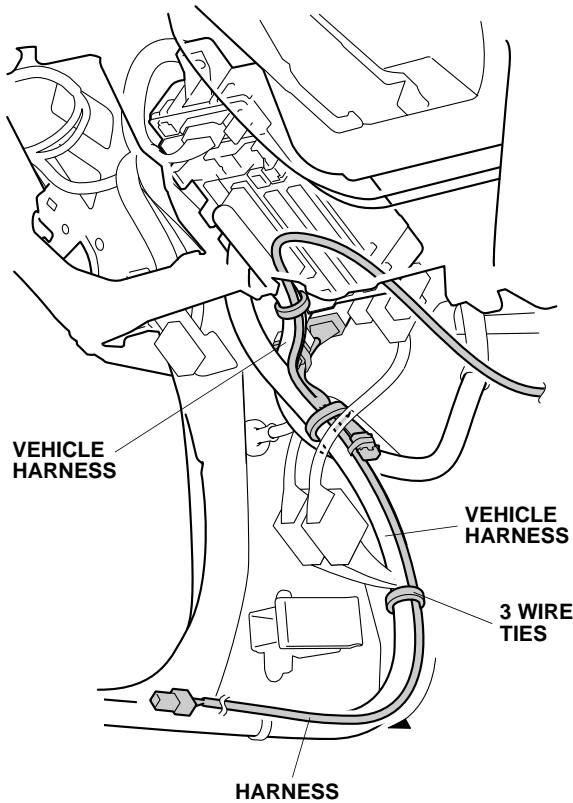


27. Continue to route the harness along the vehicle harness. Align the green tape on the harness to the vehicle clip and loosely secure the harness to the vehicle harness with one wire tie.

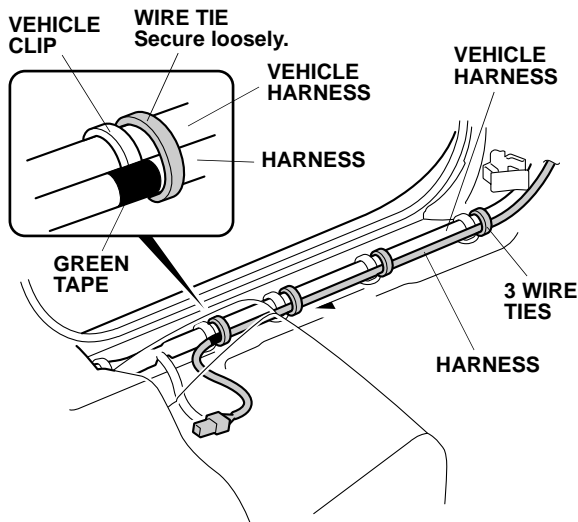


28. Secure the harness to the vehicle harness with three wire ties.

29. Route the harness as shown. Install the wire tie with clip A to the harness at the green tape. Secure the harness to the instrument panel with the wire tie with clip A.

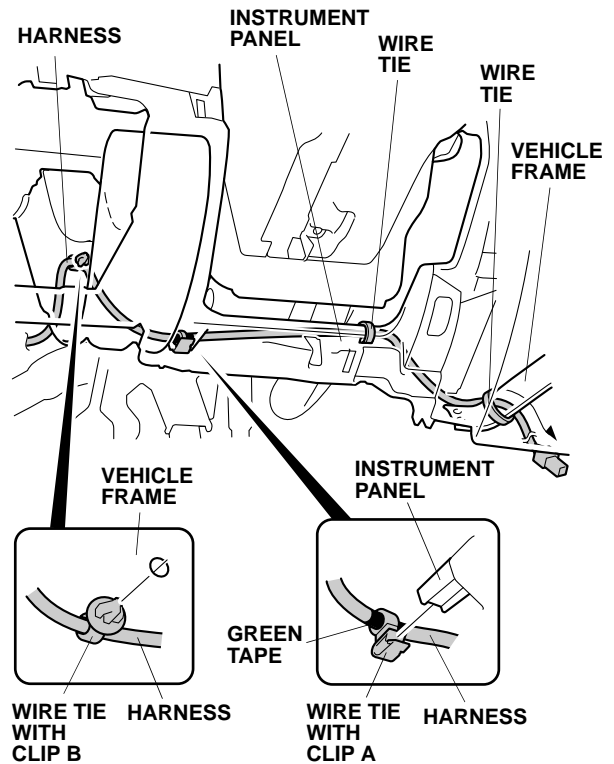


30. Install the wire tie with clip B to the harness. Secure the harness to the hole in the vehicle frame.
31. Secure the harness to the instrument panel and vehicle frame with two wire ties.


32. Use tape to attach a piece of steel wire to the harness. Route the harness from the driver's side to the passenger's side of the center console.

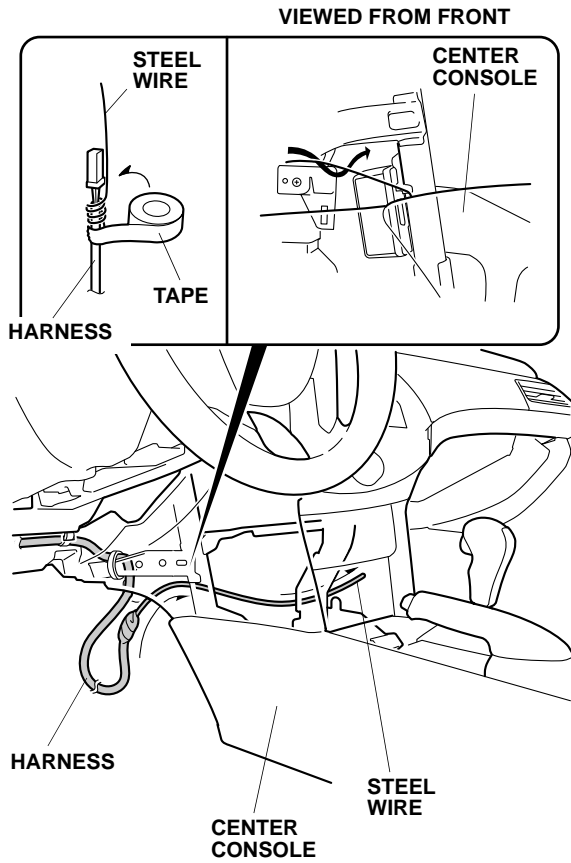


33. Route the harness to the glove box opening.

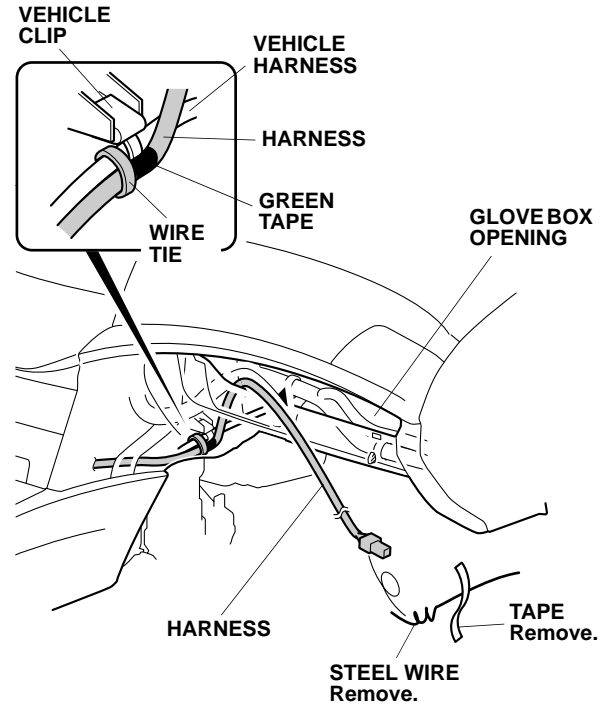


34. Remove the tape and steel wire.
35. Align the green tape on the harness to the vehicle clip and secure the harness to the vehicle harness with one wire tie.
36. Route the harness along the vehicle harness and secure it to the vehicle harness with two wire ties as shown.

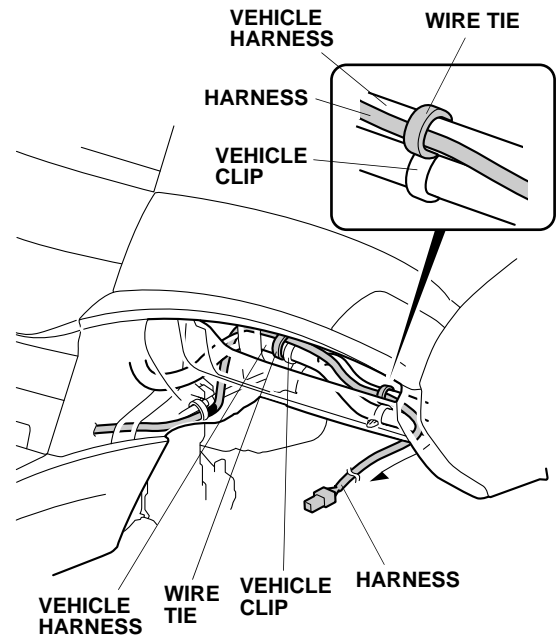


37. Route the harness along the vehicle harness. Align the green tape on the harness with the vehicle clip, and secure the harness to the vehicle harness with one wire tie.

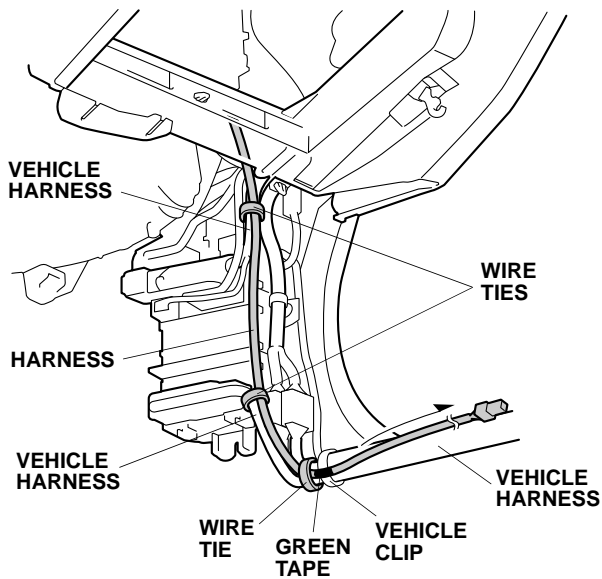


38. Secure the harness to the vehicle harness with two wire ties.
39. Pull up the door opening seal. Attach a piece of tape to the vehicle panel in the position shown.

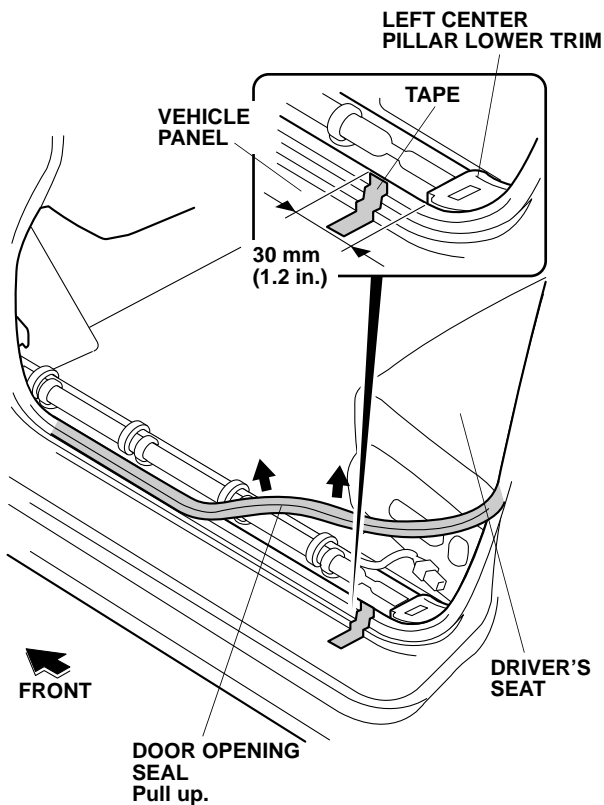


40. Align the front step trim with the tape.

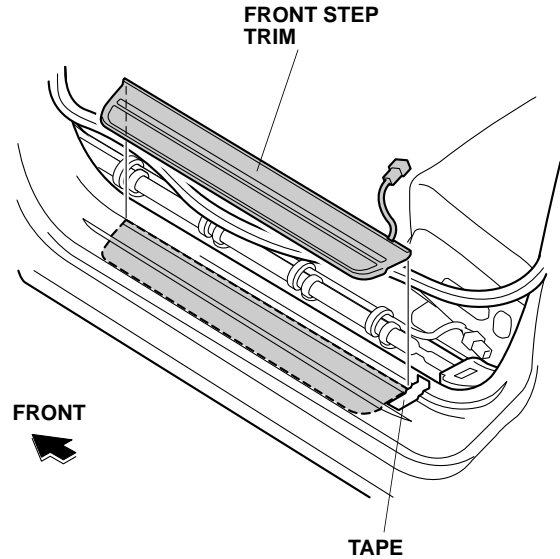


41. Reinstall the door opening seal. Use a felt-tip pen to mark the door opening seal where the front step trim harness crosses it.

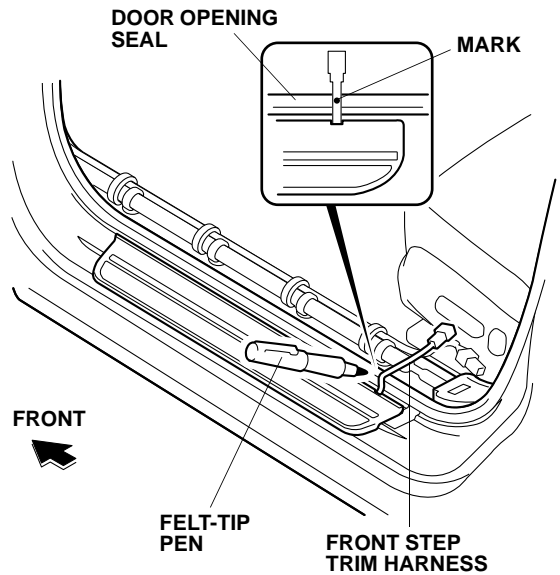


42. Remove the front step trim.

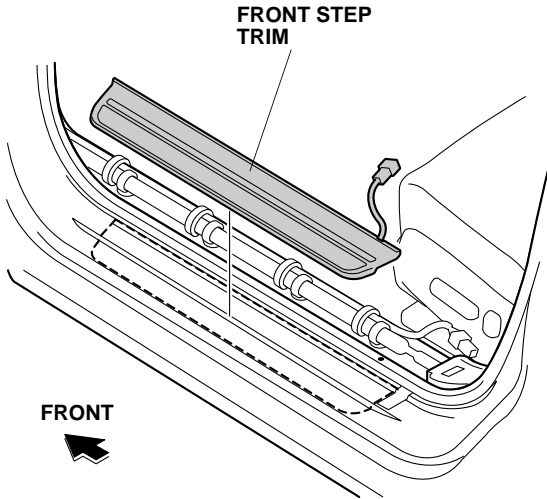


43. Using an alcohol swab, thoroughly clean the area where the front step trim will attach.

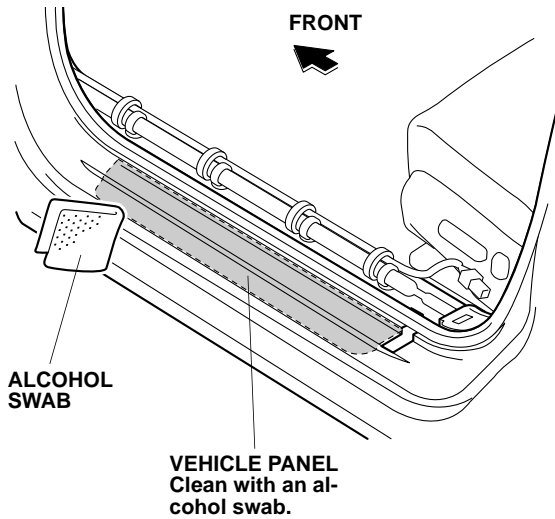


44. Peel back the ends of the three adhesive backings on the front step trim, and attach them to the top surface with masking tape.

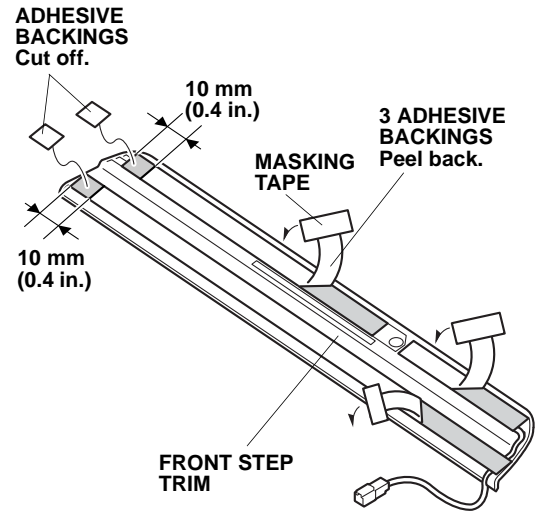


45. Cut off the ends of the adhesive backings on the front step trim as shown.
46. Align the rear tip of the front step trim to the tape attached in step 39 and press on the trim to attach it to the vehicle panel.

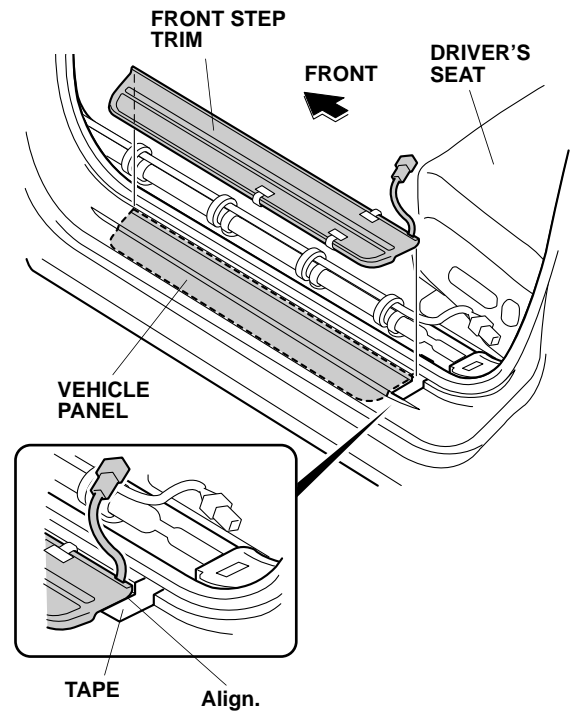

47. Remove the adhesive backings from the front step trim. Press firmly on the front step trim with your hands for 30 seconds.

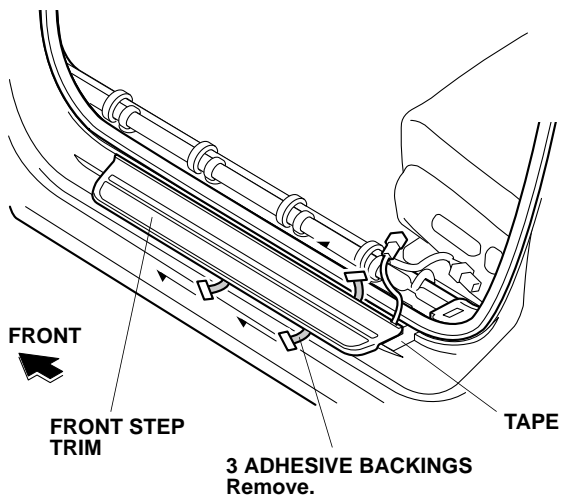


48. Remove the tape attached in step 39.
49. Pull up the door opening seal. Plug the harness 2-pin connector to the front step trim 2-pin connector.

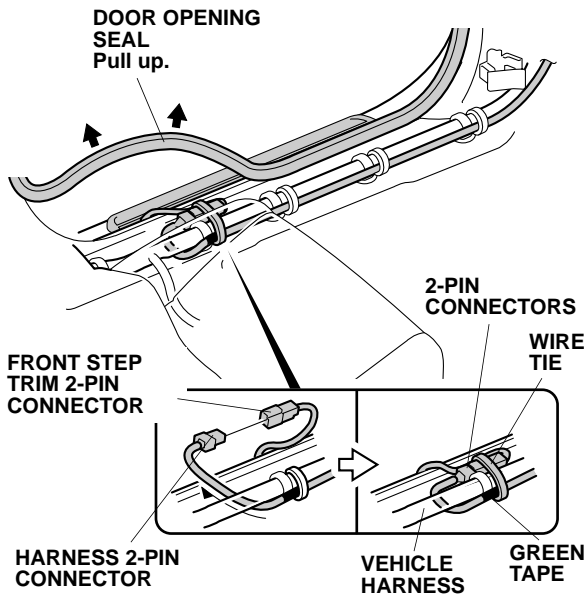


50. Secure the 2-pin connectors to the vehicle harness with the wire tie loosely secured in step 27.

51. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the harness tape will attach.

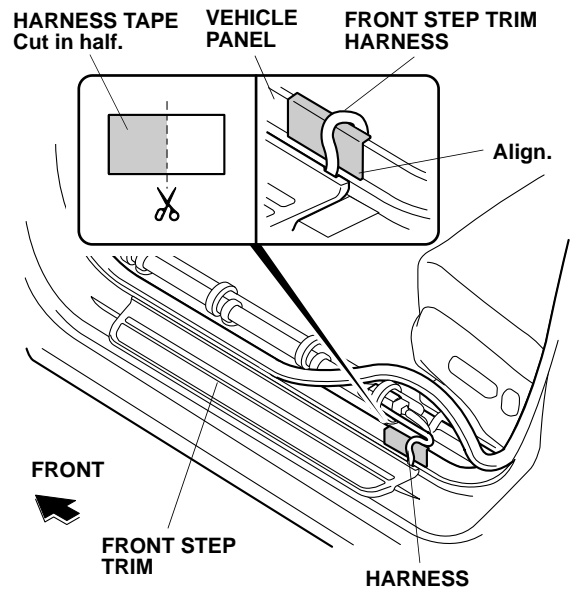


52. Cut one harness tape in half. Align the piece of harness tape with the end of the front step trim and attach it to the vehicle panel as shown.
53. Using a utility knife, cut the door opening seal at the mark made in step 41.

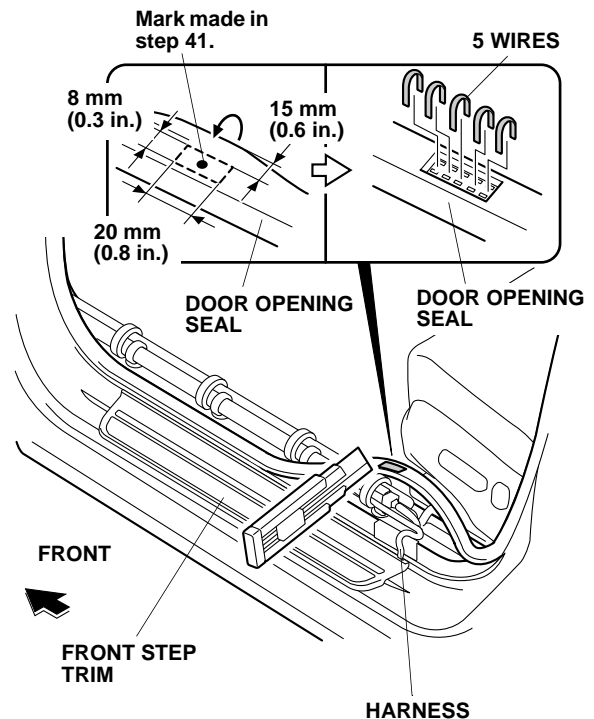


54. Remove the five wires that are exposed in the door opening seal.
55. Reinstall the door opening seal.


56. Pull up the passenger's door opening seal. Attach a piece of tape to the vehicle panel in the position shown.

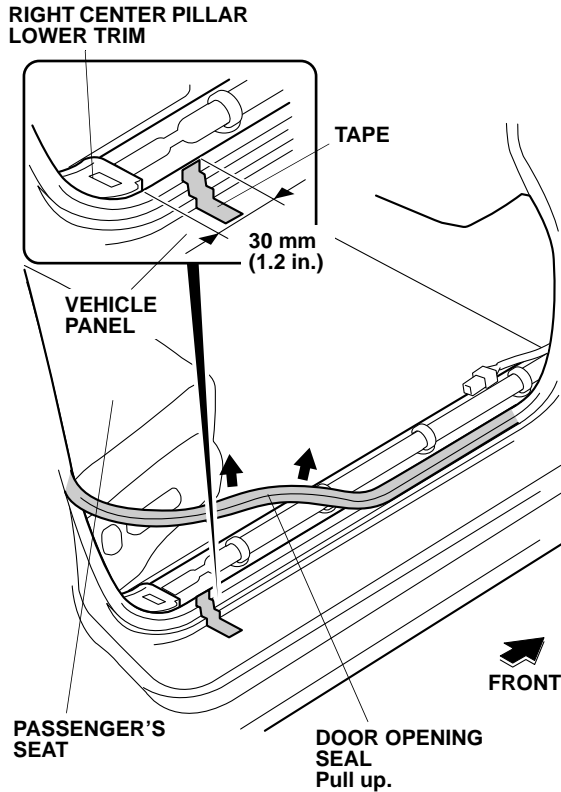


57. Align the edge of the front step trim with the tape.

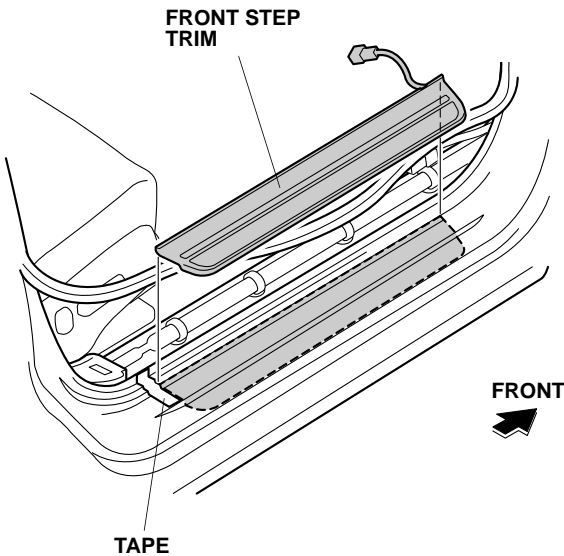


58. Reinstall the door opening seal. Use a felt-tip pen to mark the door opening seal where the front step trim harness crosses it.

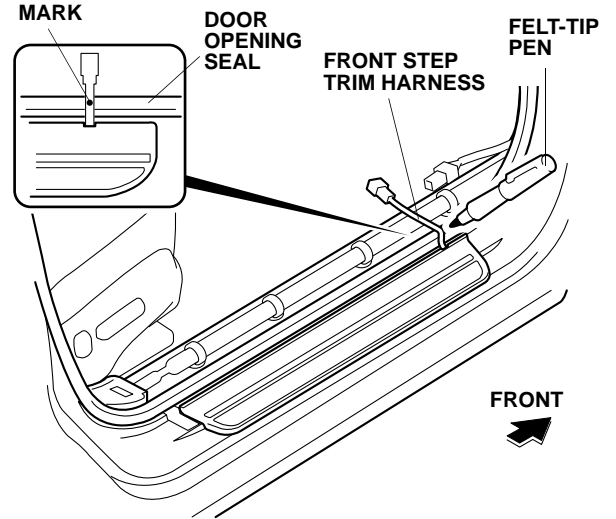


59. Remove the front step trim.

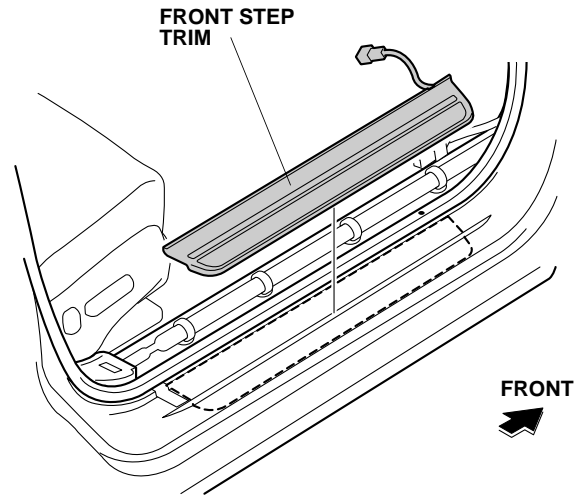

60. Using an alcohol swab, thoroughly clean the area where the front step trim will attach.

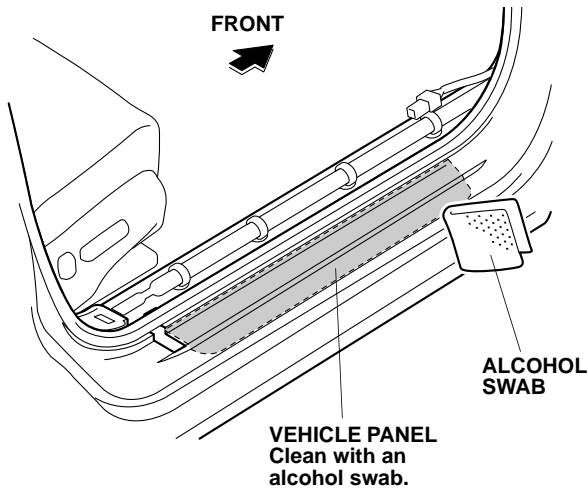


61. Peel back the ends of the three adhesive backings on the front step trim, and attach them to the top surface with masking tape.

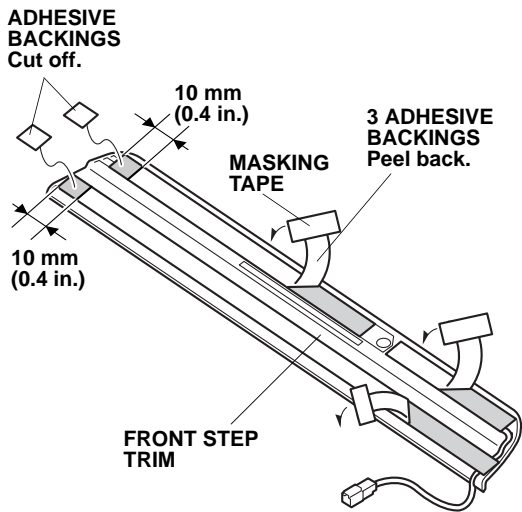


62. Cut off the ends of the adhesive backings on the front step trim as shown.

63. Align the rear tip of the front step trim to the tape attached in step 56 and press on the trim to attach it to the vehicle panel.

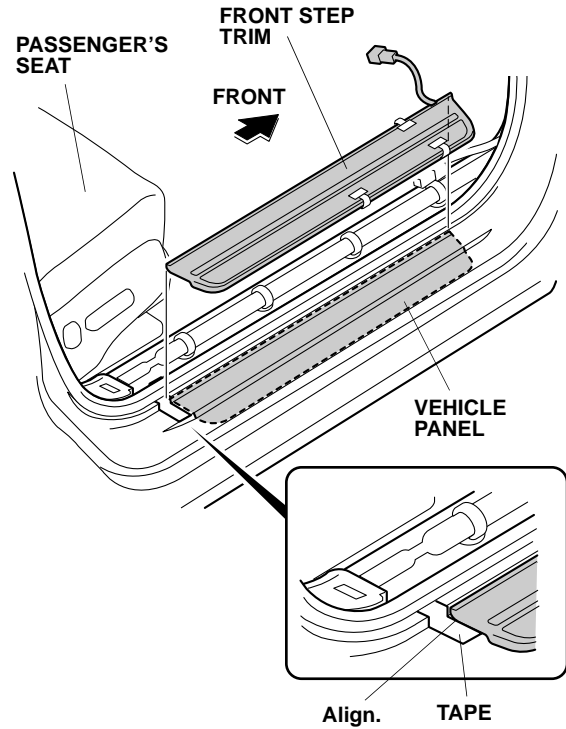


64. Remove the adhesive backings from the front step trim. Press firmly on the front step trim with your hands for 30 seconds.

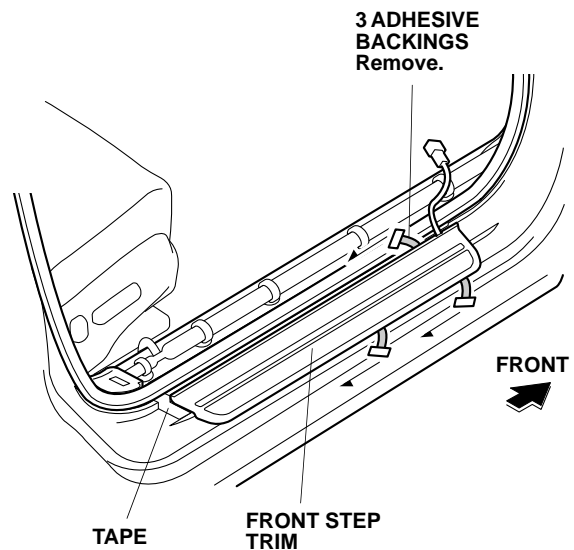


65. Remove the tape attached in step 56.

66. Pull up the door opening seal. Plug the harness 2-pin connector to the front step trim 2-pin connector.

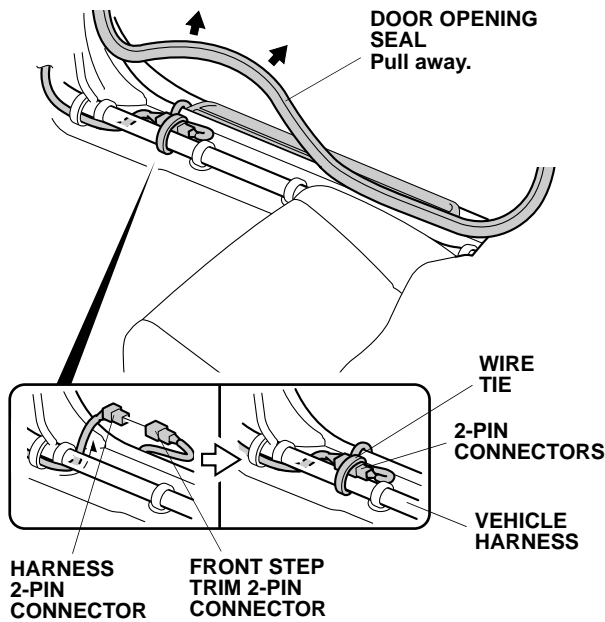


67. Secure the 2-pin connectors to the vehicle harness with one wire tie as shown.
68. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the harness tape will attach.

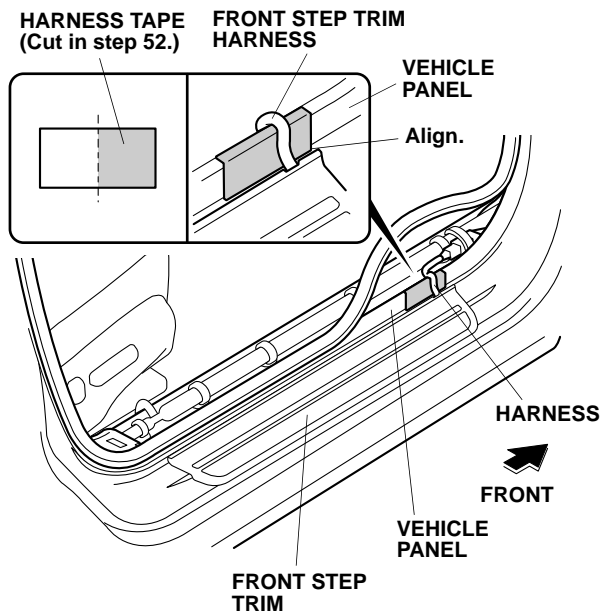


69. Align the piece of harness tape cut in step 52 with the end of the front step trim and attach it to the vehicle panel as shown.

70. Using a utility knife, cut the door opening seal at the mark made in step 58.

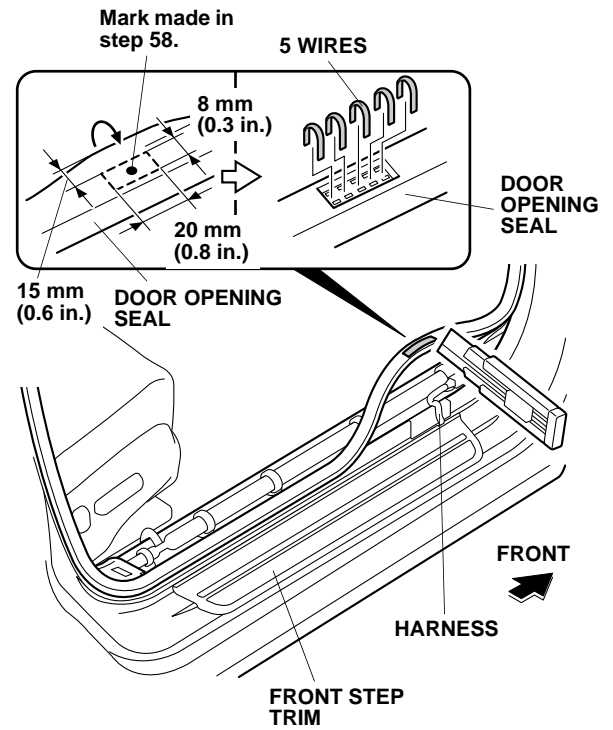


71. Remove the five wires that are exposed in the door opening seal.
72. Reinstall the door opening seal.


73. Attach a piece of tape to the vehicle panel in the position shown.

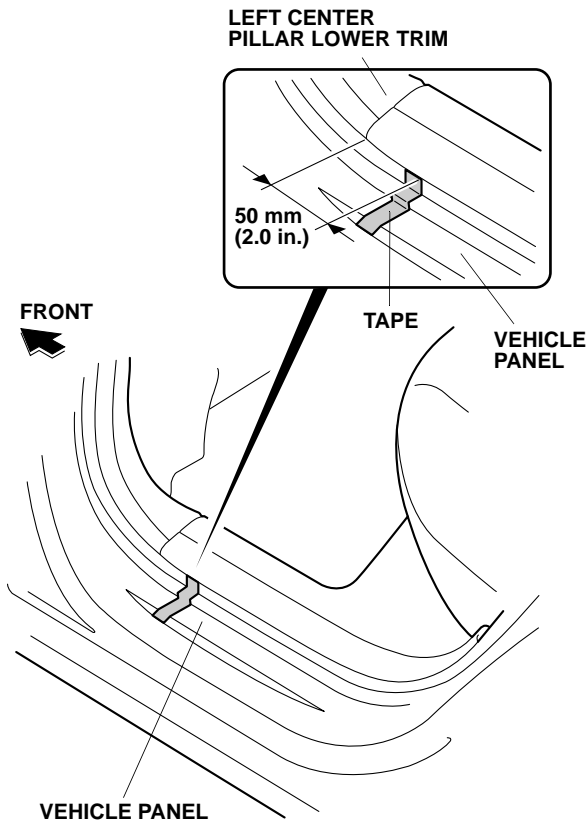


74. Using an alcohol swab, thoroughly clean the area where the rear step trim will attach.

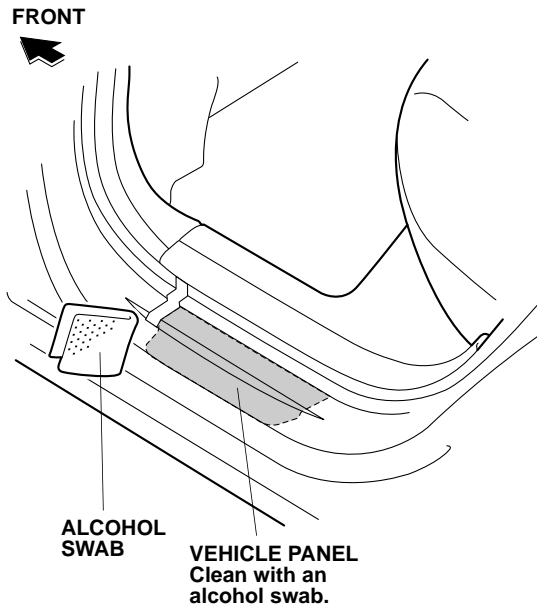


75. Peel back the ends of the two adhesive backings and attach them to the top surface of the rear step trim with masking tape.

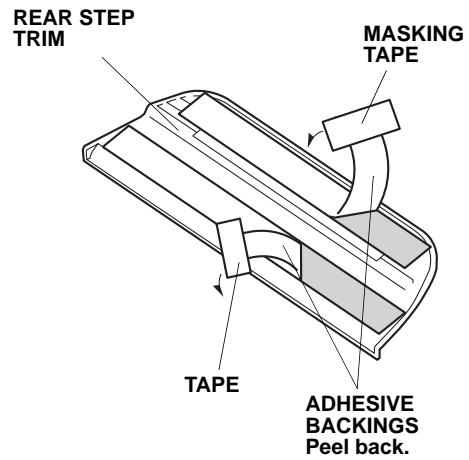

76. Align the front tip of the rear step trim to the tape attached in step 73 and press on the trim to attach it to the vehicle panel.

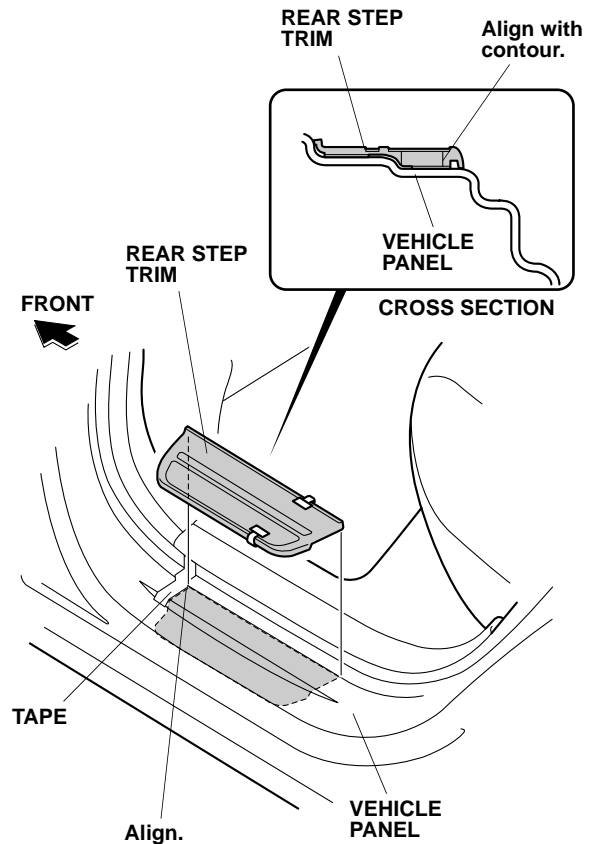

77. Remove the adhesive backings from the rear step trim. Press firmly on the rear step trim with your hands for 30 seconds.

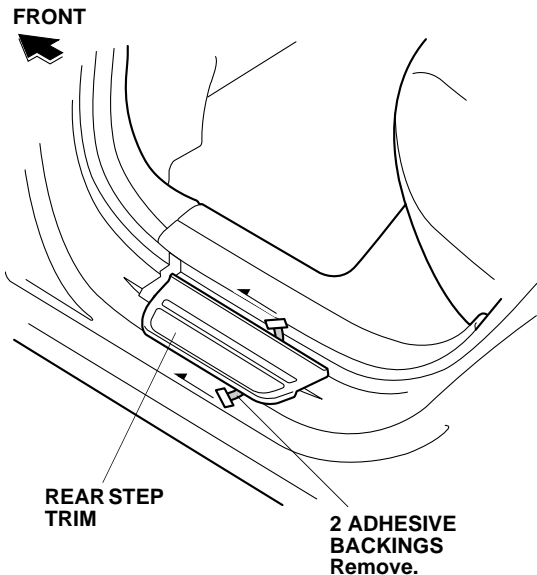

78. Remove the tape attached in step 73.
79. Repeat steps 73 through 78 to install the rear step trim on the right side of the vehicle.
80. Check that all wire harnesses and cables are routed properly and that all connectors are plugged in.
81. Reinstall all removed parts.
82. Reconnect the negative cable to the battery.
83. Make sure all electrical features operate properly.
84. Enter the customer's radio anti-theft code, and reset the radio station presets.
85. Reset the clock.
86. Make sure the lights in the door sill trim come on when the doors are open.