



INSTALLATION INSTRUCTIONS


Accessory
CASSETTE OR MP3 PLAYER (VP)

Application
2008 PILOT


Publications No.
All 37151-37657
Issue Date
JULY 2007

Player Attachment Kit (sold separately) : P/N 08B06-S9V-100A


BUS cable

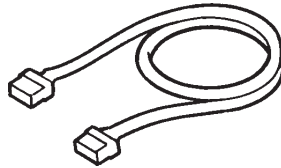

3 Wire ties

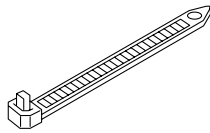


3 EPT sealers

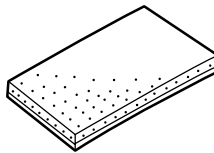


DIN Bezel Kit (sold separately) : P/N 08B23-S9V-100C


Left player bracket



Right player bracket




DIN bezel

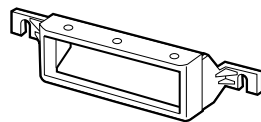

Cassette Player (sold separately) : P/N 08A03-5E1-001


Cassette player

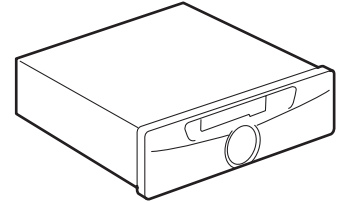

4 Washer-screws, 5 x 8 mm




Owner's manual



MP3 Player (sold separately) : P/N 08A06-4E1-201


MP3 player

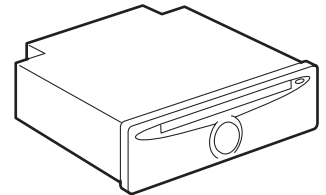

4 Washer-bolts, 5 x 8 mm



Accessory user's information manual



TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver
Flat-tip screwdriver
10 mm Combination wrench
Ratchet
10 mm Socket

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers”.

NOTE:


- An additional bus cable is required when installing multiple players.
 - Two player attachment kits are necessary to install two players.
1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
 2. Disconnect the negative cable from the battery.
 3. Remove the meter panel (two self-tapping screws and two clips).

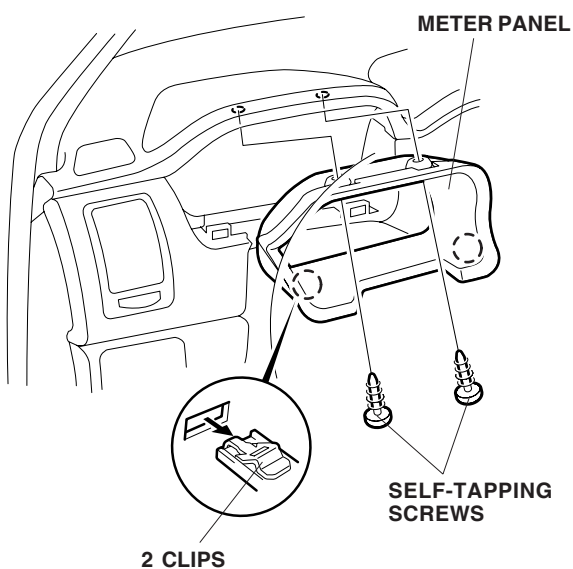


4. Remove the meter sub panel (three clips).

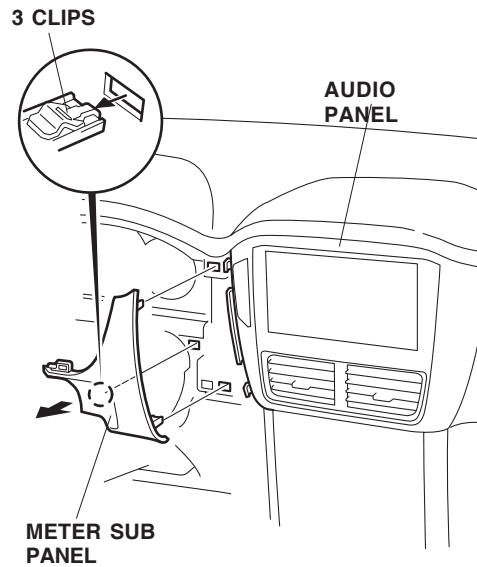

5. Gently pull out on the left side of the audio panel to release the two clips, then pull out to release the remaining three clips. Unplug the vehicle connectors and remove the audio panel.

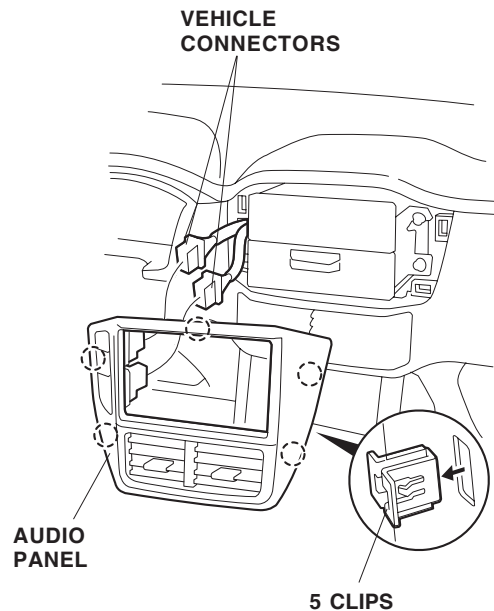


- Remove the audio unit (four screws, pull the audio unit out toward you, unplug the vehicle connectors and antenna lead).

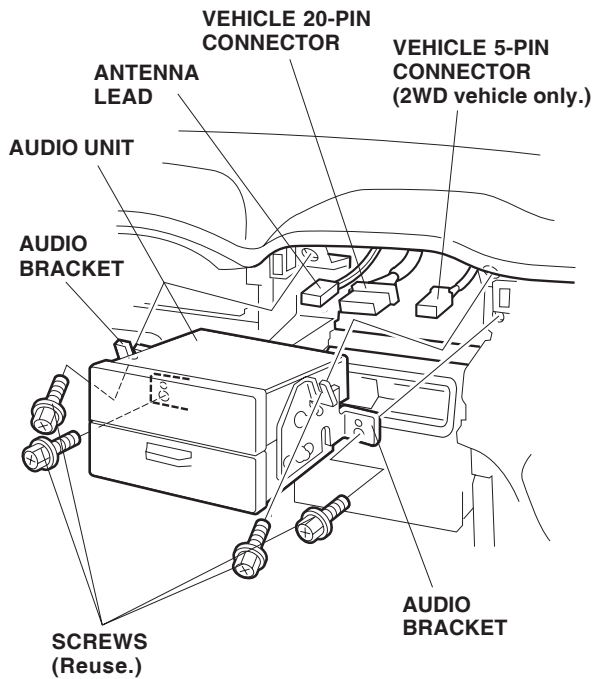


If you are **only** installing one player (cassette, or MP3), go to step 24. If you are installing two players (cassette, and MP3), continue with step 7.


- Remove the driver's and passenger's center console trim pieces (three clips each). Take care not to damage the clips.

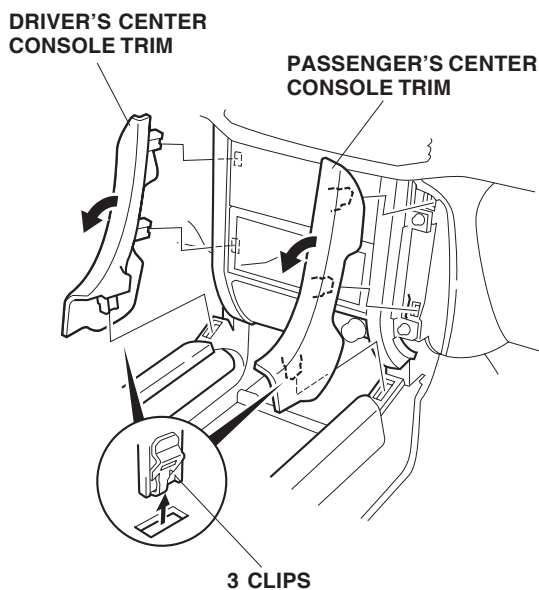

- Remove four self-tapping screws that fasten the center panel.

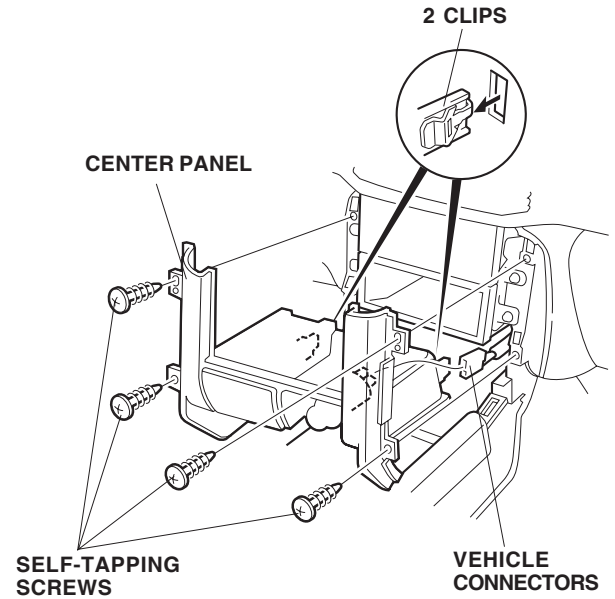

- Pull the center panel out toward you to release the two clips. Unplug the vehicle connector from the accessory socket, and remove the center panel.
- Remove four screws that fasten the left and right vehicle brackets. Pull the heater control unit and pocket out toward you, and unplug the vehicle connectors.

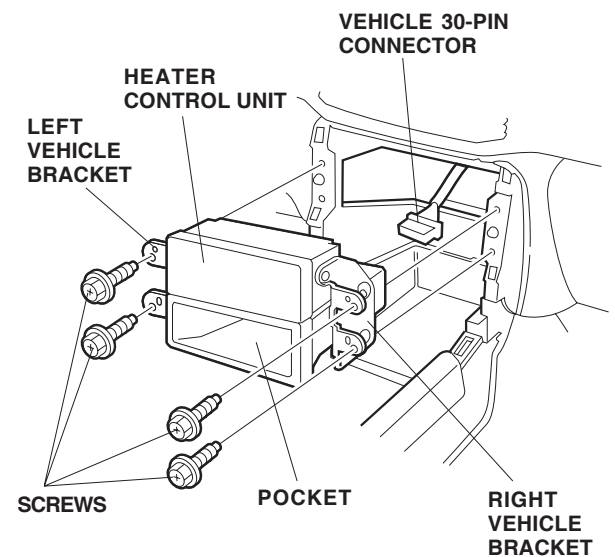

11. Remove the left and right audio brackets (two washer-screws and one self-tapping screw for each bracket). Separate the audio unit and pocket. Set the pocket aside; it will not be reused.




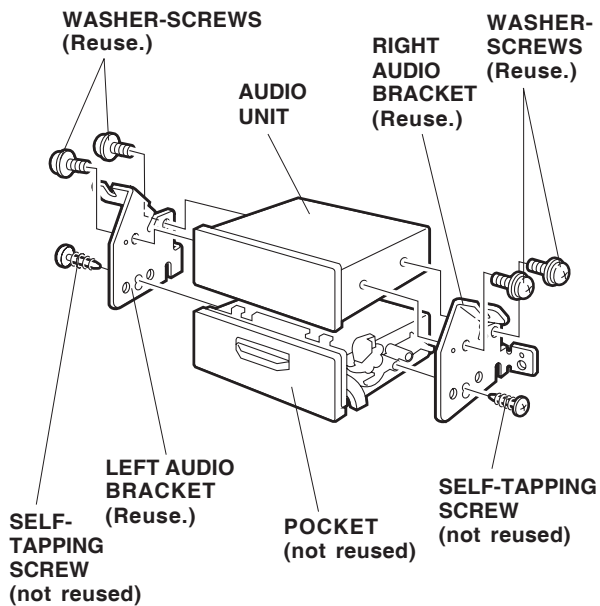


Illustration of the Components Installed on the Vehicle


With cassette and MP3 Player:

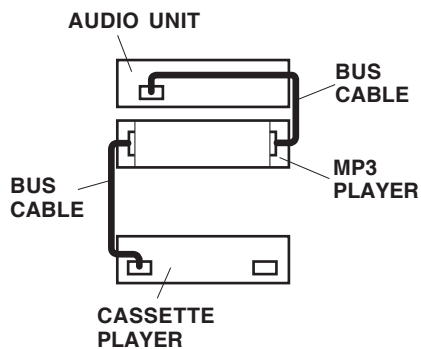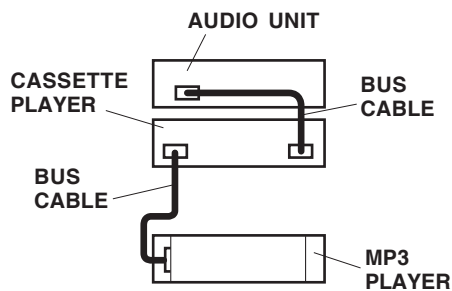


12. Place the cassette or MP3 player under the audio unit, and attach the left and right audio unit brackets to the player and the audio unit using the four washer-screws removed in step 11, and the four 5 x 8 mm washer-screws included with the cassette or MP3 player.

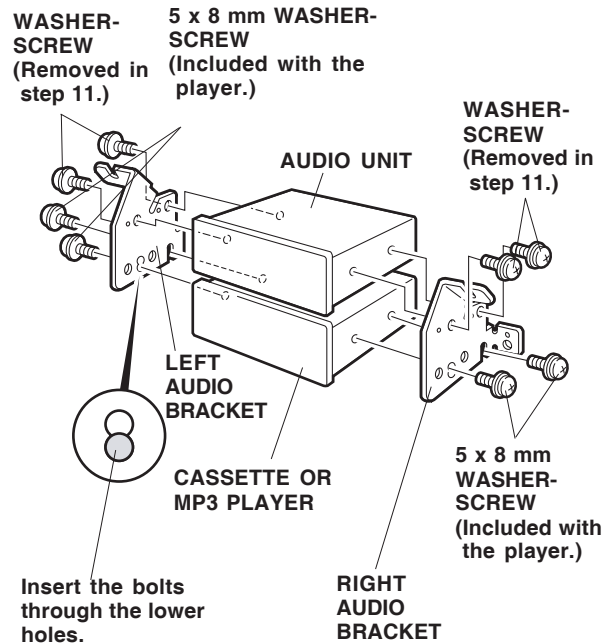

13. Remove the left and right vehicle brackets (six self-tapping screws), separate the heater control unit from pocket. Set the pocket aside, it will not be reused.

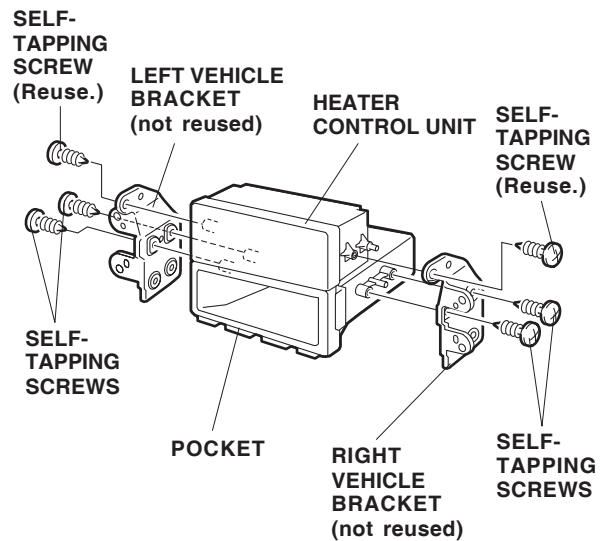


14. Install the DIN bezel to the cassette or MP3 player. Set the heater control unit on the cassette/MP3 player, and attach the left and right player brackets to the cassette/MP3 player and the heater control unit using the two self-tapping screws removed in step 13 and four 5 x 8 mm washer-screws included with the cassette/MP3 player.

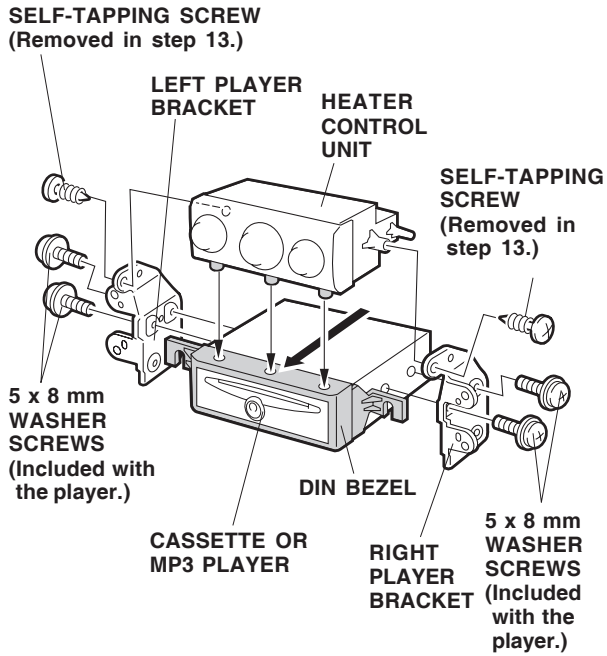


15. Install the bus cable:

With Cassette and MP3 Player:

- Route an additional bus cable from the audio unit opening to the heater control unit opening.
- Fold the bus cable in half, and secure it to the vehicle 20-pin connector harness with one bus cable end 30 mm from the 20-pin connector, and the other bus cable end 120 mm from the 20-pin connector.

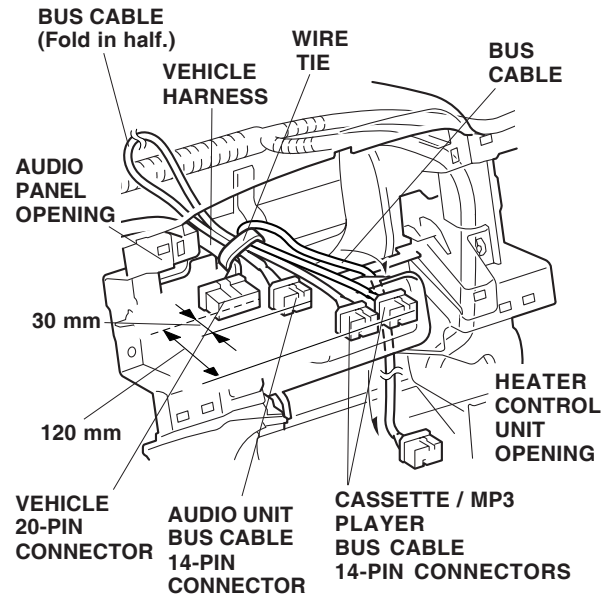


- Bundle up the excess bus cable you folded in half and secure it to the vehicle harness with one wire tie.

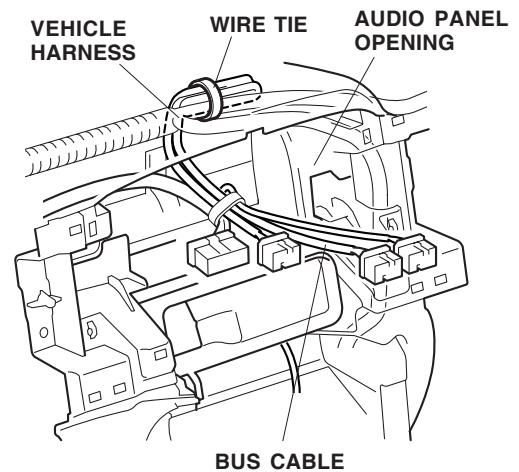


16. Plus the bus cable 14-pin connectors into the audio unit and cassette or MP3 player.


Cassette Player

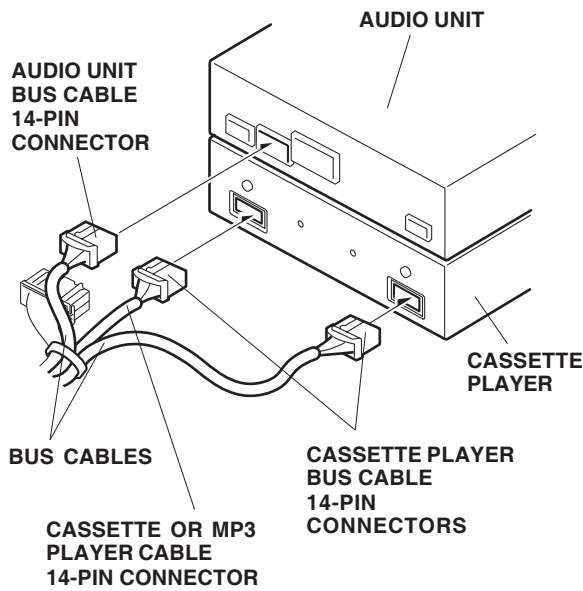

MP3 Player with Cassette Player

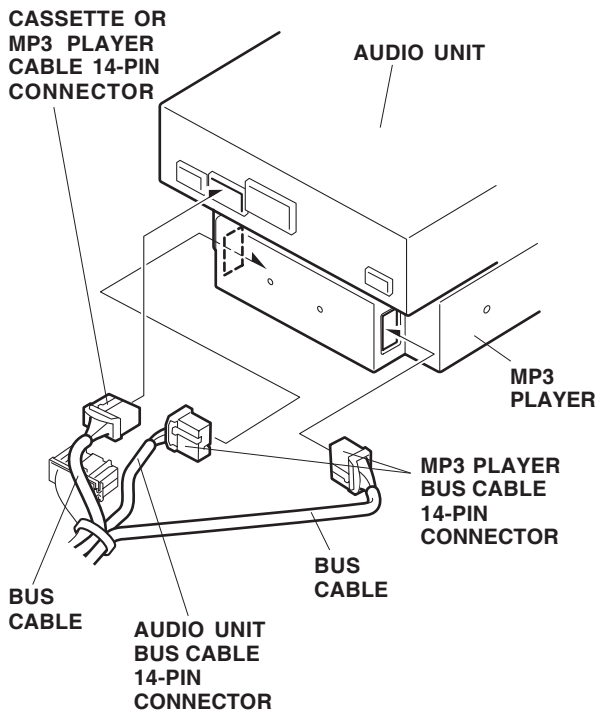


17. Connect the vehicle connectors and antenna lead to the audio unit. Insert the audio unit assembly into the audio panel opening and reinstall it with the four screws that you removed in step 6.

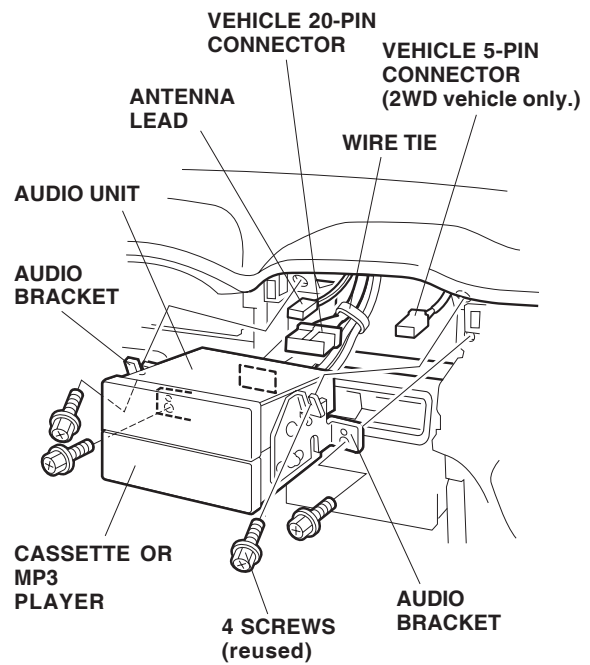

18. At the heater control opening, attach two EPT sealers to the bus cable at the location shown.

With Cassette and MP3 Player:

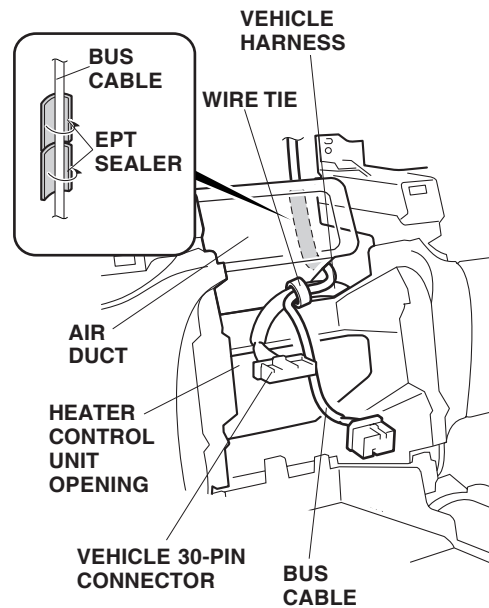


19. Secure the bus cable to the vehicle harness using one wire tie.

20. Connect the bus cable 14-pin connector to the player as shown.


Cassette Player

With Cassette and MP3 Player:

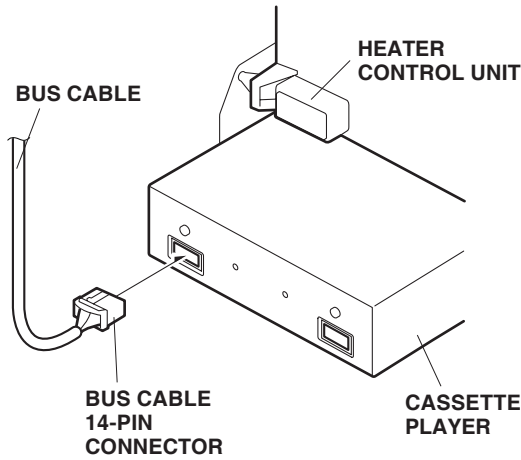


MP3 Player

With Cassette and MP3 Player:

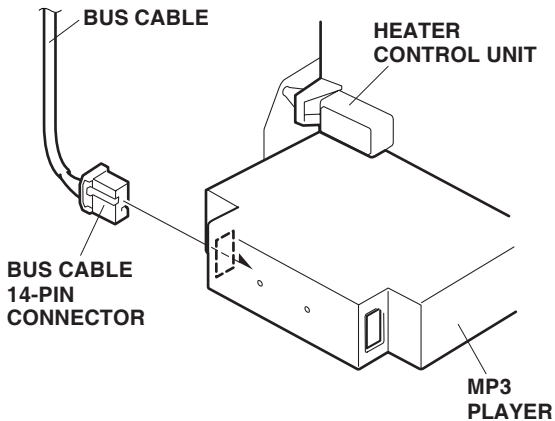

21. Remove the two washer-screws from the dashboard.

With Cassette and MP3 Player:

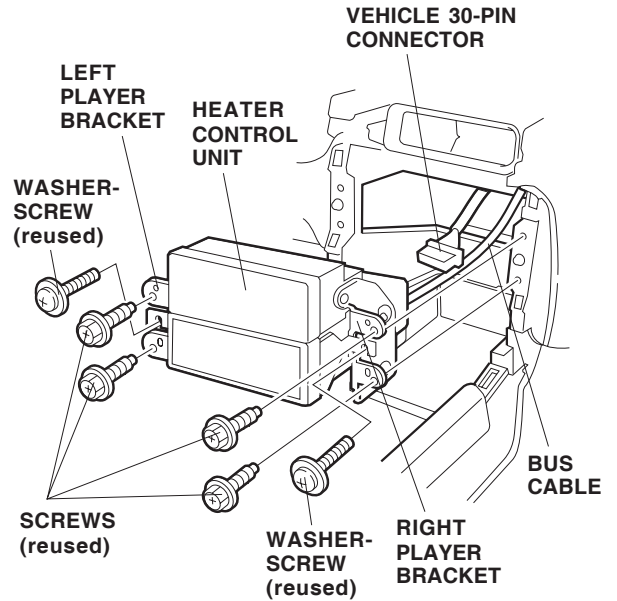

22. Connect the vehicle connectors to the heater control unit, and reinstall the heater control unit using the four screws that you removed in step 10. Go to step 29.

Installing One Player Below the Audio Unit

23. Remove the left and right audio brackets (two washer-screws and one self-tapping screw for each bracket). Separate the audio unit and pocket. Set the pocket aside; it will not be reused.



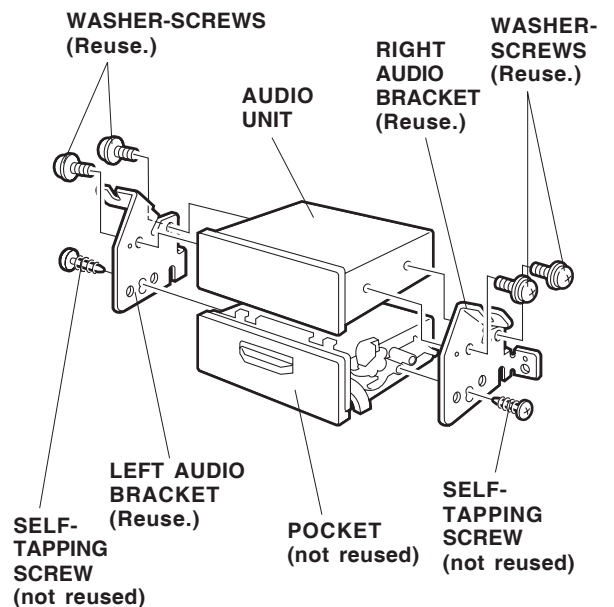



Illustration of the Components Installed on the Vehicle

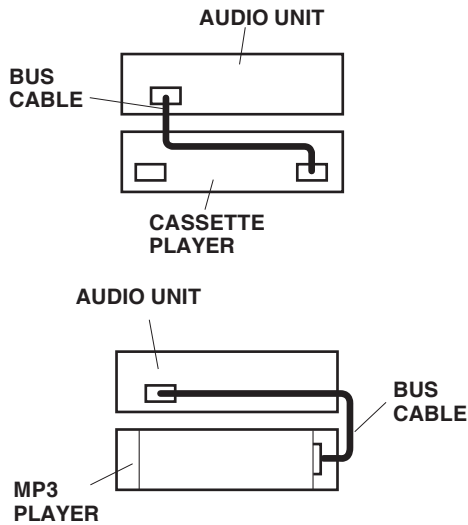


24. Place the cassette or MP3 player under the audio unit, and attach the left and right audio unit brackets to the player and the audio unit using the four washer-screws removed in step 11, and the four 5 x 8 mm washer-screws included the cassette or MP3 player.

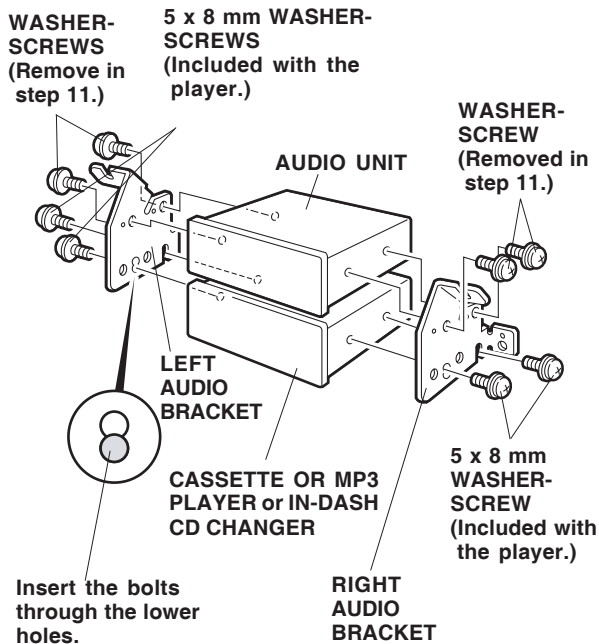

25. Fold one bus cable in half, and secure it to the vehicle 20-pin connector harness with one bus cable end 30 mm from the 20-pin connector, and the other bus cable end 120 mm from the 20-pin connector.

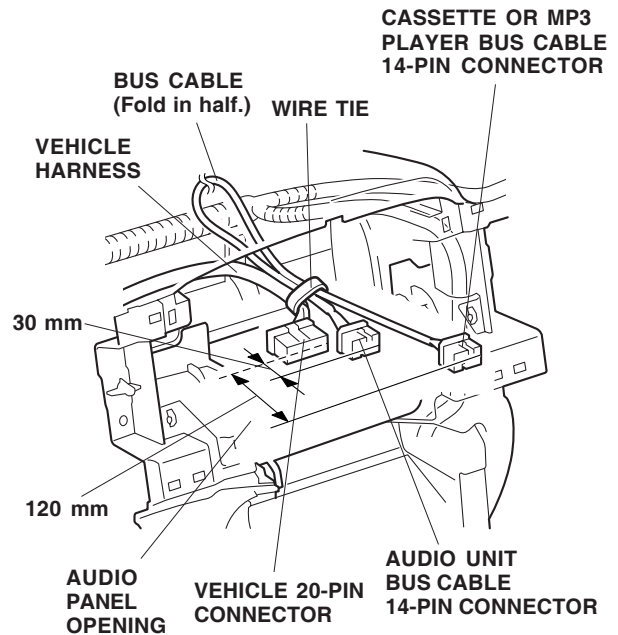


26. Bundle up the excess bus cable you folded in half and secure it to the vehicle harness with one wire tie.

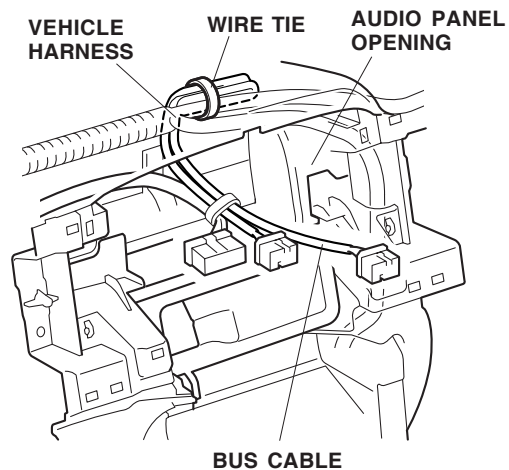


- Plug the two bus cable 14-pin connectors into the audio unit and cassette or MP3 player.


Cassette Player:

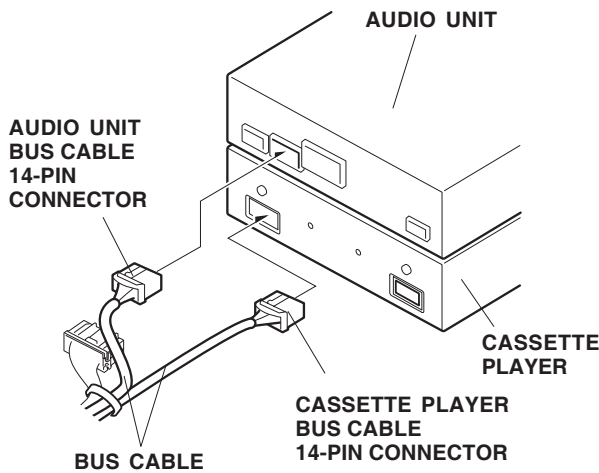

MP3 Player:

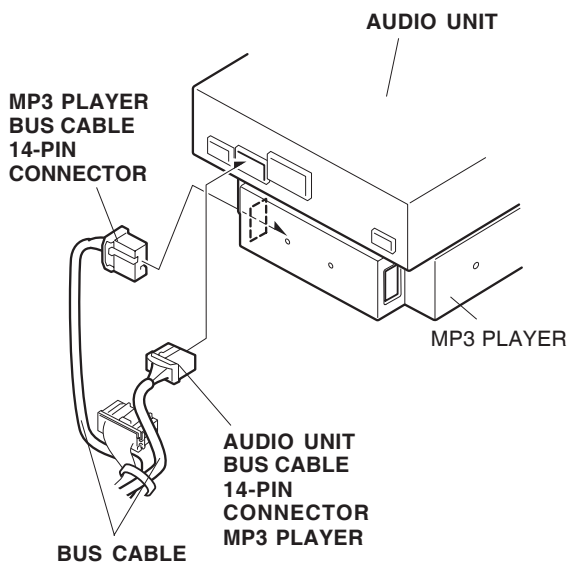

- Connect the vehicle connectors and antenna lead to the audio unit. Insert the audio unit assembly into the audio panel opening and reinstall it with the four screws that you removed in step 6.

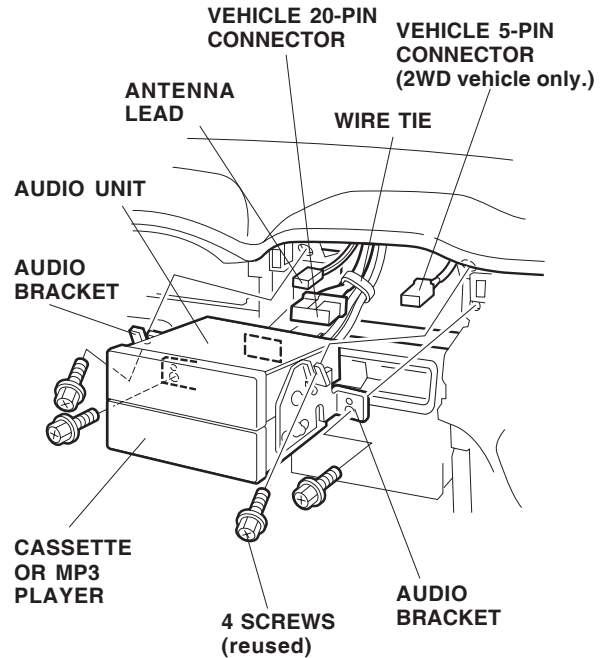

- Check that all wire harnesses are routed properly and all connectors are plugged in.
 - Reconnect the negative cable to the battery.
 - Enter the customer's radio anti-theft code, and reset the radio station presets.
 - Set the clock.
 - Check the operation of the player according to the owner's manual supplied.
 - Put the player owner's manual in the glove box.
 - Reinstall all removed parts.
- NOTE :** Whenever the battery is disconnected, the driver's AUTO function is disabled.
- Start the engine. Push down on the driver's window switch until the window is fully open.
 - Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
 - Test the AUTO window function.